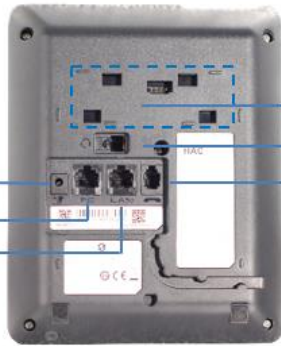



8008(G) CE Quick Start Guide

Connection	Function Keys
 <p>Stand Slot</p> <p>Headset Port</p> <p>Handset Port</p> <p>5V Power Supply</p> <p>PC Port</p> <p>LAN Port (POE)</p>	 <p>LED Indicator</p> <p>6 Programmable Keys</p> <p>Volume Keys</p> <p>Back Key</p> <p>Input Method</p> <p>2 Line Keys</p> <p>Message Key</p> <p>Mute Key</p> <p>Redail Key</p> <p>Release Key</p>

Change Language: English by default. Pressing the navigation key to the Setting contents, then choose Phone --> Language.

1. Configuring network

Dynamic mode by default. Phone UI change path: Pressing the navigation key to the Setting contents, then choose Admin (Default password: 123456) --> IP param --> IP Config --> Ipv4 Settings --> Ipv4 Mode.


2. Configuring account

Users can configure account via phone UI or WEB UI. WEB UI example.

Step 1: Pressing navigation key to the Settings --> Network interface to view the IP address

Step 2: Entering https://IP address on the browser. Login with "admin" and password "123456"

Step 3: Configuring account as below

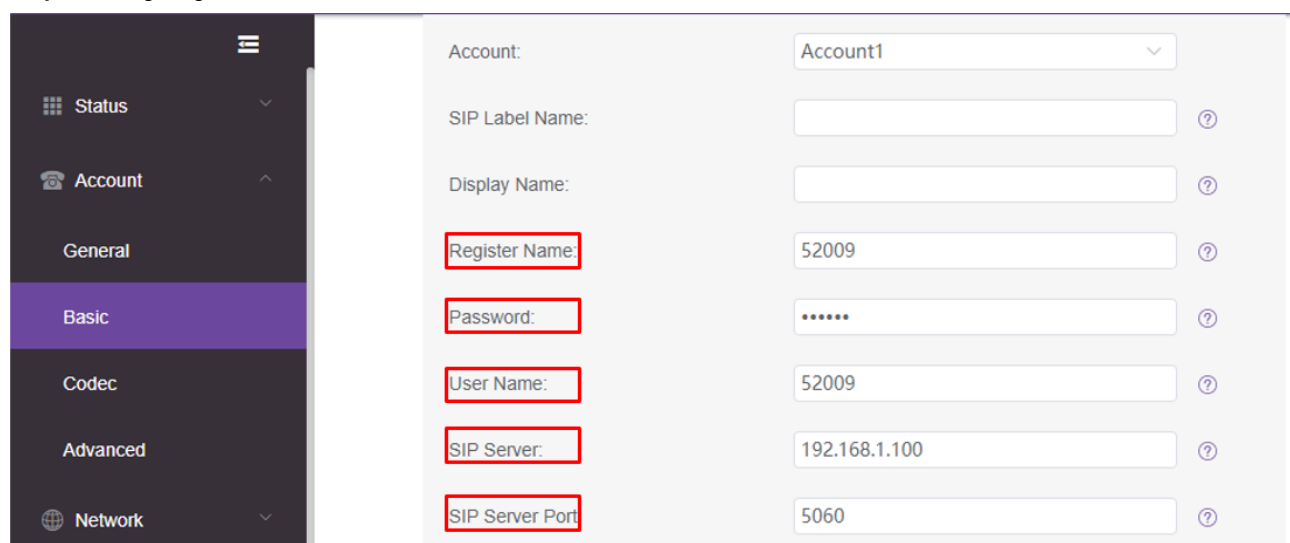

Note: Marked items are mandatory. Please contact service provider for detail.

Step 4: Account status shows "Registered" when the SIP account is registered successfully.