


## **Quick Start Guide**

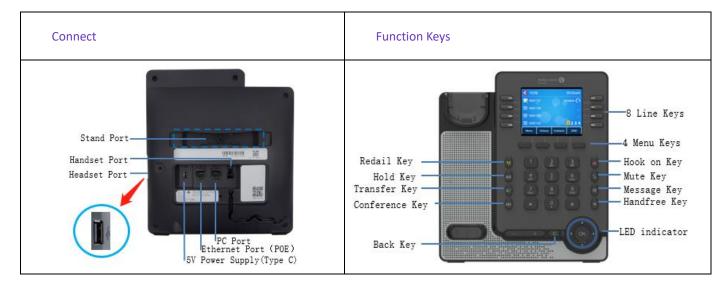

## 1. Configure network

Change Language: The default language is English. Menu—Basic Setting—Language, choose your language.

The phone gets Dynamic IP address by default. If you need to set static IP address, you can choose static IP mode for configuration.

 Static IP Settings as following:
 Menu—Advanced Setting (Default password: 123456)
 Metwork—IP Config—IPV4 Setting—

 Ipv4 Mode (select Static),
 then fill in the corresponding network configuration.


## 2. Configure account

You can configure your account via phone GUI or WEB UI. WEB configuration as an example:

Step 1: Press the "OK" key on the phone to obtain the IP address;

Step 2: Enter https://IP on the browser. The administrator's default login User name is "admin" and Password is "123456";

## Step 3: Configure your account as shown below;

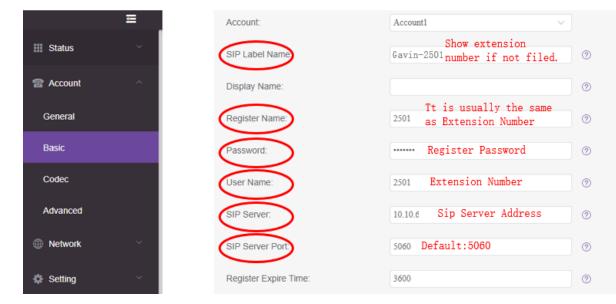

Step 4: When the account status is "Registered", it indicates "Registered".