



ALE M8 DeskPhone

User Manual

ALE Legal Notice:

www.al-enterprise.com

The Alcatel-Lucent name and logo are trademarks of Nokia used under license by ALE. To view other trademarks used by affiliated companies of ALE Holding, visit: www.al-enterprise.com/en/legal/trademarks-copyright.

All other trademarks are the property of their respective owners. The information presented is subject to change without notice. Neither ALE Holding nor any of its affiliates assumes any responsibility for inaccuracies contained herein.

© Copyright 2022 ALE International, ALE USA Inc. All rights reserved in all countries.

Introduction

Thank you for choosing an Alcatel-Lucent Enterprise phone.

This document describes the services offered by the ALE M8 DeskPhone connected to a SIP server.



ALE M8 DeskPhone

The phone described in this document is supported on different SIP servers, and some features described in this document depend on the SIP server to which the phone is connected. If more information about system compatibility or about the level of features for a given SIP server is needed, please contact your system administrator.

The main features of the phone are listed as follows:

Features	M8 DeskPhone
Multiple accounts	•
5-inch color screen	•
Adjustable screen brightness	•
Adjustable phone angle	•
HD handset	•
RJ9 headset	•
USB headset	•
Bluetooth headset	•
2.4G & 5G Wi-Fi	•
Dual 1000 Mbps Ethernet ports (POE)	•
Add-on module EM20	•
Add-on module EM200	•
External power supply	•
Wall-mounted	•
Switching among multiple audio modes	•
Local 12-party conference	•
IP Call	•
Web management	•
OpenVPN	•
Easy Device Management (EDM) / Easy Deployment Server (EDS)	•

The labels and icons presented in this document are not contractually binding and may be modified without prior warning.


1	Getting started	8
1.1	Packaging list	8
1.2	Installing your desk phone	8
1.2.1	Installing the foot	8
1.2.2	Connecting your desk phone	9
1.2.3	Installing a wired handset	9
2	Getting to know your desk phone	10
2.1	Introduction of the M8 DeskPhone	10
2.2	Main screen	10
2.3	Call management interface	11
2.4	Navigation key	12
2.5	Permanent function keys	12
2.6	Programmable key icons	13
2.7	Telephone status/Call icons	14
2.8	Alpha-numeric dialpad	15
2.9	Desk phone connectors	16
3	Using your desk phone	17
3.1	Information about the phone	17
3.1.1	Events	17
3.1.2	Phone status	17
3.2	Multiple SIP Accounts	18
3.2.1	Configuring the programmable keys for an account	18
3.2.2	Defining the default SIP Account	18
3.3	Making a call	18
3.3.1	Opening the dialer	19
3.3.2	Dialing the phone number	19
3.3.3	Calling by name	20
3.3.4	Calling from the call log	20
3.3.5	Calling using your personal directory	20
3.3.6	Calling using Speed Dial key	21
3.3.7	Making a peer to peer SIP call	21
3.4	Receiving a call	21
3.5	Switching between audio modes	22
3.6	Redialing	22
3.6.1	Redial list	22
3.7	Directory management	22
3.7.1	Contacts	22
3.7.2	Contacts management	23
3.7.3	Calling your contact	24
3.7.4	Creating a new contact	24
3.7.5	Creating a new group	25
3.7.6	Modifying a contact	25
3.7.7	Deleting a contact	25
3.7.8	Deleting all contacts	25
3.7.9	Deleting a group in the local directory	26
3.7.10	Deleting all groups in the local directory	26
3.7.11	Importing contacts from your mobile phone via Bluetooth®	26
3.8	Managing the call log (history)	27
3.8.1	Calling a contact	28

3.8.2	Displaying missed calls only	28
3.8.3	Deleting the call log of a contact	29
3.8.4	Clearing the call log	29
3.9	Managing speed dial	29
3.9.1	Creating a Speed Dial key	29
3.9.2	Making a call using speed dial	29
3.10	Sending DTMF signals	29
3.11	Muting the microphone	30
3.12	Auto answer	30
3.13	Making an intercom call	31
3.14	Configuring intercom calls	31
3.15	Changing a PIN code	31
3.16	Locking/Unlocking your desk phone	32
3.16.1	Locking your desk phone	32
3.16.2	Unlocking your desk phone	32
3.16.3	Activating or deactivating the automatic keypad lock	32
3.17	During a conversation	32
3.18	Making a second call during a conversation	33
3.19	Answering a second call during a conversation	33
3.20	Canceling your second call and resuming the first call	34
3.21	Placing a call on hold	34
3.22	Switching between calls	34
3.23	Transferring a call	35
3.23.1	Transferring a call to another contact on hold	35
3.23.2	Transferring your call to another contact	35
3.23.3	Blind transfer	35
3.24	Three-party conference	36
3.24.1	End conference	36
3.24.2	Leaving your two contacts talking together after the conference	36
3.25	Multi-party conference	36
3.25.1	End conference	37
3.26	Hiding your phone number	37
3.27	Rejecting anonymous calls	37
3.28	Do not disturb (DND)	38
3.29	Call Forward	38
3.30	Canceling call forwarding	39
3.31	Listening to your voice messages	39
3.32	Defining a hotline number	39
3.33	Multicast paging	40
3.33.1	Set a paging key	40
3.33.2	Set a paging group	40
3.33.3	Receive multicast paging	41
3.33.4	Manage a paging call	41
4	Doing more with your desk phone	42
4.1	Use your desk phone as a USB audiohub for your computer	42
4.1.1	Installation	42
4.1.2	Using your phone as an audio hub	45
4.2	Use the desk phone to process mobile calls	45
4.3	Configuring your desk phone for remote working	46
4.4	Connecting your desk phone to the Wi-Fi	47

4.4.1	Configuring the wireless network	47
4.4.2	Managing wireless networks	48
4.5	Hot Desking	49
4.5.1	Log on to Hot Desking	49
4.5.2	Log off from Hot Desking	50
5	Customizing your desk phone	51
5.1	Adjusting the audio features	51
5.1.1	Selecting the ringing	51
5.1.2	Adjusting the ringing volume	51
5.1.3	Configuring the ring mode	51
5.1.4	Configuring the beep mode	52
5.1.5	Configuring the seat mode	52
5.2	Selecting a language	52
5.3	Adjusting the brightness of the desk phone	52
5.4	Enabling the Screen Saver and defining the Wait Time	53
5.5	Configuring the background picture for your desk phone	53
5.6	Configuring the homepage format	54
5.7	Defining the voicemail number	54
5.8	Programmable keys	54
5.8.1	Creating a programmable key	54
5.8.2	Deleting a programmable key	54
5.8.3	Types of supported programmable keys	55
5.9	Call pick-up	57
5.10	Activating the headset mode	57
5.11	Defining Time and Date format	57
5.12	Manage Bluetooth® device	57
5.12.1	Installing a Bluetooth® device	57
5.12.2	List connected devices	58
5.12.3	Removing a Bluetooth® accessory (headset, handset, etc.)	58
5.12.4	Removing all Bluetooth® accessories	59
5.12.5	Edit the name of your desk phone	59
6	Contacting your administrator (technical support)	60
6.1	Technical code / Date code	60
6.2	Viewing the software version/network settings (IP address)	60
6.3	Accessing administrator configuration	60
6.3.1	Default password	60
6.3.2	Advanced Settings	61
6.3.3	Web Based Management (WBM)	61
7	Accessories	63
7.1	Headset	63
7.2	Wall mounting kit	63
8	Technical specifications	64
9	Ordering information	65
10	Guarantee and clauses	66
10.1	Safety instructions	66
10.2	FCC Statement	66
10.3	IC Statement	67

1 Getting started

1.1 Packaging list

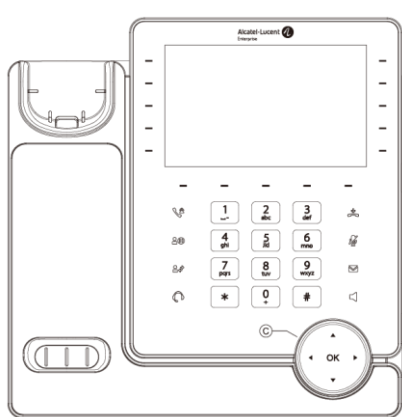

Desk phone




Handset cord




Handset



Ethernet cable

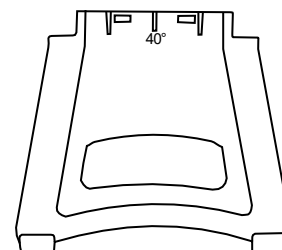

Phone stand




Safety manual and
quick user guide

1.2 Installing your desk phone

1.2.1 Installing the foot

Clip the foot into its compartment behind the phone. Your desk phone provides a 2-degree foot. Depending on the way you insert the foot into the phone, your desk phone will have a different angle: 55° or 40°. The angle noted on the top of the foot (facing up) corresponds to the angle that the phone will have after having inserted the foot.

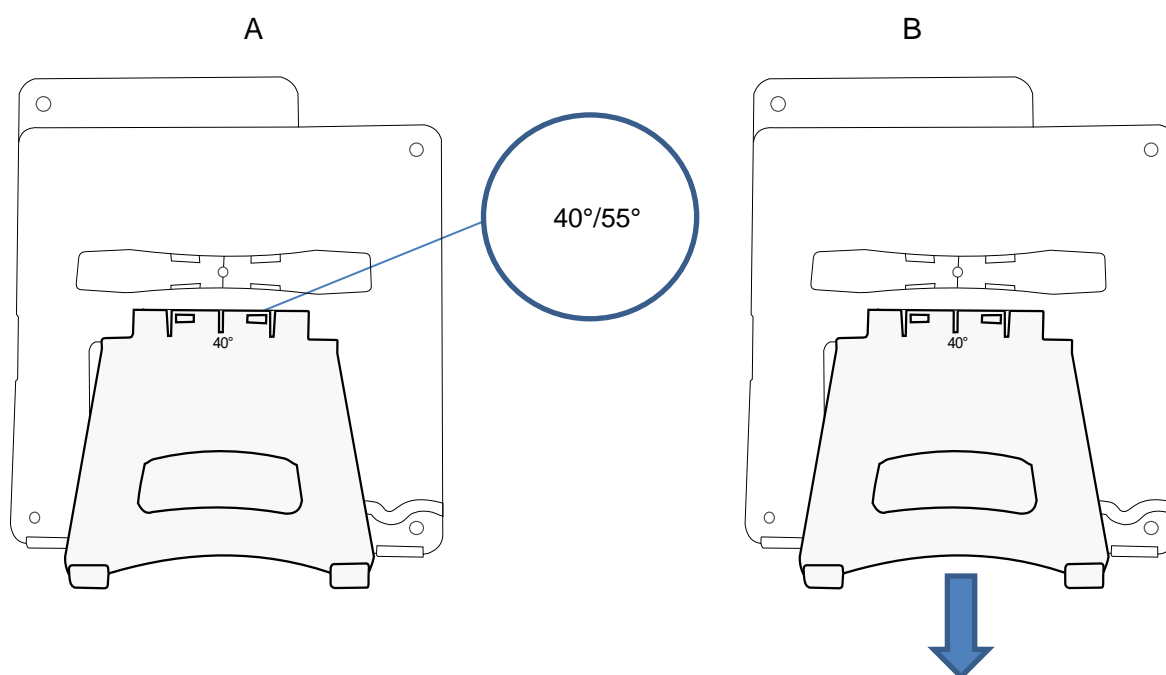


To unclip the foot, pull it straight back until it separates from the phone.

1.2.2 Connecting your desk phone

Firstly, connect the handset cord to the lower notch ④ if it is not correctly connected (your phone is usually provided with the handset cord connected).

If your desk phone is not correctly configured, you can connect it to the network ① (② is used to connect to your PC). If your desk phone is not powered by PoE (Power over Ethernet), you have to connect the phone to the external power supply which supports USB-C connector ③.

The power adapter is sold separately. For more information, contact your administrator.

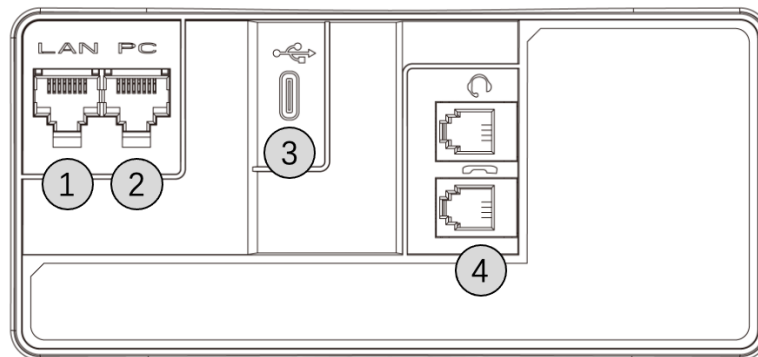

1.2.3 Installing a wired handset

By default, your handset cord is correctly connected to the phone. If you have to replace it:

- Please refer to the previous section, then plug-in the wired handset to the appropriate connector.
- Make sure you position and fix the cord correctly in the compartment intended for that purpose.

2 Getting to know your desk phone

2.1 Introduction of the M8 DeskPhone

The M8 DeskPhone is a newly added model in the Alcatel-Lucent Enterprise Myriad series of desk phones. With its color display, 9 programmable line keys with LED and 1 page navigation key, the desk phone delivers excellent user experience and optimum calling effect. The M8 DeskPhone is compatible with remote working VPN. In this way, it is perfect for use at your office in your enterprise or at home (remote working).



①	5-inch color screen	⑥	Navigation key (touch sensitive)
②	36 virtual programmable keys (navigating through 4 pages) can be configured to various features including SIP accounts and speed dial. You can navigate through pages on the screen with the navigation key to use different programmable keys.	⑦	Super wideband loudspeaker for optimized sound
③	Soft keys: The keys provide menu options and relevant features. Soft keys can be configured to different options by the administrator. In the Idle state: you can press soft keys to enter menus in different levels to operate and manage the phone. In the conversation mode: soft keys provide different actions depending on the application scenarios.	⑧	HD wide-band wired handset
④	(touch-sensitive) Function keys: quick access to the phone's features.	⑨	2-degree foot (40°, 55°)
⑤	LED: Flashing blue: incoming calls, new events displayed on the screen (voice messages, missed calls). Steady blue: ongoing call.		

2.2 Main screen

The main screen, composed of 4 pages, displays all the information about programmable keys, such as the registered SIP account and speed dial.





①	Press the Menu soft key to display submenus for various features and configuring or managing the phone. Use up-down navigation keys to navigate through the menu items. Press OK to perform the selected menu features.
②	5 dynamic keys are configurable by your administrator to access features of the phone depending on your needs.
③	Line keys are associated with SIP accounts (optional). Press the line key associated with a SIP account to make a call with this account or to answer an incoming call to this account.
④	Programmable keys Press the programmable key to use features of the relevant settings, such as immediately making a call. Long press the programmable key to enter the programmable key configuration interface.
⑤	Virtual page navigation key Use the right-left navigation keys or the programmable key next to the '1234' icon to navigate through virtual pages. The number of the current page is highlighted.
⑥	Displays date, time and some status icons of the phone.
⑦	Time and Date
⑧	Displays logo: You can enable/disable this logo, and upload customized logo.

2.3 Call management interface












①	Features on the soft key labels depend on the call status. Press the relevant key to perform the action. For example, you can pause transfer the current call.
②	Displays SIP account in conversation.
③	Displays the incoming call and the corresponding conversation status, such as phone number and duration.

2.4 Navigation key

	<p>OK key:</p> <p>Press OK key to validate the status of an option.</p> <p>Left-right navigation keys:</p> <p>When you input the text, use the keys to move the cursor, move the option or move from one page to another.</p> <p>Up-down navigation keys:</p> <p>Use the keys to select an item on a list. When the information extends more than one page, use the down navigation key to display the next page. Use the up navigation key to display the previous page.</p> <p>Use up-down navigation keys on a menu to browse the item or an option on the menu.</p>
	<p>Back/Exit key:</p> <p>Use C key to go back to the previous menu.</p>
<i>Bkspc</i>	Delete the last entered number or character.
<i>More</i>	More options.













2.5 Permanent function keys

	<ul style="list-style-type: none"> Answer an incoming call or make a call. Short press to enter the list of last number dialed.
	<ul style="list-style-type: none"> Place a call on hold.

	<ul style="list-style-type: none"> Recover the call on hold.
	<ul style="list-style-type: none"> Transfer a call.
	<ul style="list-style-type: none"> Enable headset Disable headset
	<ul style="list-style-type: none"> Reject an incoming call. Hang up. Return to the main screen.
	<ul style="list-style-type: none"> Mute key During a call, press this key to stop your contact from hearing you. When activated, the key is lit red.
	<ul style="list-style-type: none"> Voice mail The message key flashes when you have missed an incoming call or received a new voice mail. The key stays on if there are old messages in the voice mailbox.
	<ul style="list-style-type: none"> Press this key to open dialer in handsfree mode. Press this key to answer an incoming call in handsfree mode. When a call is in progress, press this key to switch from handsfree mode to headset or handset mode.
	<ul style="list-style-type: none"> Turn the knob to decrease/increase the ringer volume in idle state or when you receive an incoming call. Turn the knob to decrease/increase the volume of the handset, loudspeaker or headset during a phone call. The volume level ranges from 0 to 16.

2.6 Programmable key icons


This table lists icons displayed on the main screen when you program a key. To program a key, see Section 5.8 (programmable keys).









	<ul style="list-style-type: none"> SIP accounts
	<ul style="list-style-type: none"> Speed dial
	<ul style="list-style-type: none"> BLF/ BLF list
	<ul style="list-style-type: none"> Hold
	<ul style="list-style-type: none"> Call Transfer
	<ul style="list-style-type: none"> Conference
	<ul style="list-style-type: none"> Redial the last number
	<ul style="list-style-type: none"> Do not disturb (DND)
	<ul style="list-style-type: none"> Directory
	<ul style="list-style-type: none"> Forward
	<ul style="list-style-type: none"> Voice mail
	<ul style="list-style-type: none"> Hot Desking





	<ul style="list-style-type: none"> • Prefix
	<ul style="list-style-type: none"> • DTMF tone
	<ul style="list-style-type: none"> • Direct pick up
	<ul style="list-style-type: none"> • Group pick up
	<ul style="list-style-type: none"> • Headset
	<ul style="list-style-type: none"> • Group Listen
	<ul style="list-style-type: none"> • Intercom
	<ul style="list-style-type: none"> • Audio Hub
	<ul style="list-style-type: none"> • Mobile account
	<ul style="list-style-type: none"> • Phone lock
	<ul style="list-style-type: none"> • Call park
	<ul style="list-style-type: none"> • Retrieve park
	<ul style="list-style-type: none"> • Private hold
	<ul style="list-style-type: none"> • USB recording
	<ul style="list-style-type: none"> • ACD
	<ul style="list-style-type: none"> • Paging
	<ul style="list-style-type: none"> • Paging list
	<ul style="list-style-type: none"> • Hoteling
	<ul style="list-style-type: none"> • Push To Talk
	<ul style="list-style-type: none"> • Call waiting

2.7 Telephone status/Call icons

Icons provide information under a certain status or the status of a specific call.

Status icons	<p>Depending on the size of the display, all status icons may not be displayed simultaneously. Which icons are displayed depends on their priority. The following icons are listed according to their priority, from the highest to the lowest.</p> <p>Status icons are displayed on the status bar at the top of the screen.</p>
	Silent mode

	Telephone locked
	Headset connected
	Handsfree connected
	Wi-Fi enabled
	Auto answer mode
	Do not disturb (DND)
	Audio Hub
	Upgrading in progress in background

Call icons	Call icons are associated with SIP accounts.
	SIP accounts (idle state)
	Incoming call icon
	Call in progress icon
	Call on hold icon





2.8 Alpha-numeric dialpad

The phone is equipped with an alphanumeric dialpad. You can switch between numeric dialpad to dial number, and alphabetic dialpad to enter text by pressing the corresponding programmed key.


- Switch between the alphabetic and numeric modes:

<i>abc/ABC/Abc</i>	When in a text box, you can switch to the alphabetic dialpad by pressing “123”.
<i>123</i>	When the alphabetic mode is activated, switch to the numeric mode by pressing “abc/ABC/Abc”.

- Enter alphabetic characters
The numeric dialpad has letters that can be displayed by successively pressing. The number is the last character in the series. Some special characters can be displayed by successively pressing the key:

	% \$ / ~ & () [] = *
	@ #
	space - _ 1
	+ . , ; : / \ ? ! 0

- Use navigation keys



You can use navigation keys to move the cursor into the text.


- Delete the last entered character

Bkspc

You can use the key to delete the last entered character. The alphabetic mode remains activated.

2.9 Desk phone connectors

The phone supports multiple connectors, which you can use to extend the features of the phone.

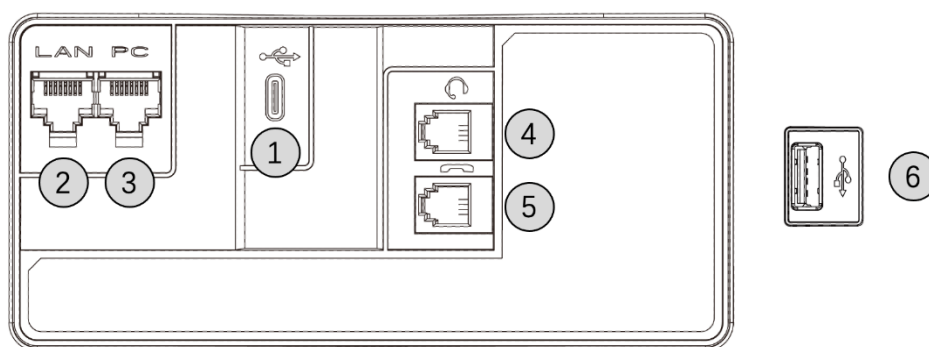

Connectors of the M8 DeskPhone


①	<p>Universal Serial Bus (USB-C) connector</p> <p>This connector is used to:</p> <ul style="list-style-type: none"> • connect the power adapter. • connect a headset. • connect a PC to use the desk phone as an audio hub.
②	<p>1000 Mbps Ethernet port to the local area network (RJ45), also supporting Power over Ethernet (PoE).</p>
③	<p>1000 Mbps Ethernet port to a PC (RJ45)</p>
④	<p>Wired headset connector (RJ9)</p>
⑤	<p>Wired handset connector (RJ9)</p>
⑥	<p>USB Type A connector</p> <p>This connector can be used to:</p> <ul style="list-style-type: none"> • connect a USB headset. • connect EM20/EM200. • connect a USB disk.

* For more information about the external wireless module of the phone, please contact your administrator or relevant sales and service staff at ALE.

3 Using your desk phone

3.1 Information about the phone

The main screen can display all SIP accounts used on the phone and programmable keys.

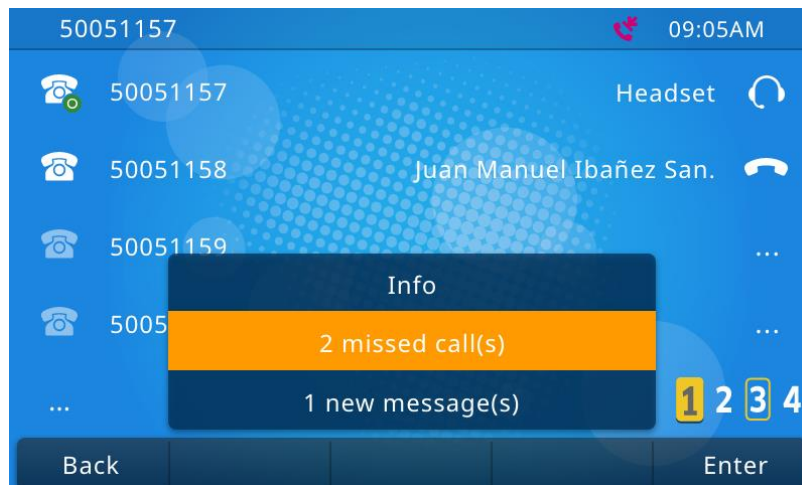


Information about new events such as missed calls and new voice mail(s) are displayed in a pop-up on the main screen. The message key flashes red when you have received a new voice mail or missed an incoming call. When the new events pop-up is displayed, the blue LED of the phone flashes slowly.

3.1.1 Events

	Press the message key to display a new event pop-up.
	Enter with up-down navigation keys to view the event details.
OK or <i>Enter</i>	Enter the interface of a new event.



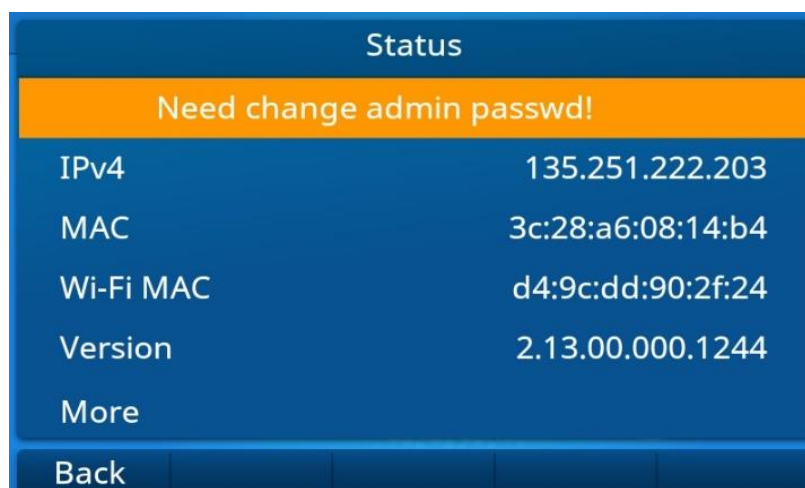


3.1.2 Phone status

In idle screen, you can press OK key to get the phone's basic information, including the phone's IP address, MAC address, software version, etc. You can also use up-down navigation keys to select More for information about the phone's network and account.





3.2 Multiple SIP Accounts



The M8 DeskPhone supports 20 SIP accounts. A default account will be used for calls unless you select the relevant account prior the call. It is recommended to program a key for each SIP account and put the key on the homepage. Then the status of the account will be displayed on the homepage. The key of the SIP account used to receive calls will flash. You can quickly answer the call to a certain account by pressing the programmable key. The descriptions of different account icons are as follows:

	If you configure an account key on the homepage, press it to select the corresponding account for making a call.
	The default SIP account is marked by a green point.
	Call forward is activated for this account.
	DND is activated for this account.
	The registration for this account failed.

3.2.1 Configuring the programmable keys for an account

	Long press on a programmable key.
	Select the type of the programmable key: <i>Account</i> . Select the relevant account. Add a label.
OK or <i>Save</i>	Save the configuration for this programmable key.




3.2.2 Defining the default SIP Account

The phone is in idle state.	
<i>Menu</i>	Press the Menu key to enter the Main Menu.
<i>Features</i>	Use up-down navigation keys and OK key to select <i>Features</i> .
<i>Default Account</i>	Use up-down navigation keys and OK key to select <i>Default Account</i> .
	Save an account as the default account.
OK or <i>Save</i>	Validate your choice.
	Complete the settings.


3.3 Making a call





This section describes how to make a call. We provide different methods to open the dialer before calling your contact.

3.3.1 Opening the dialer

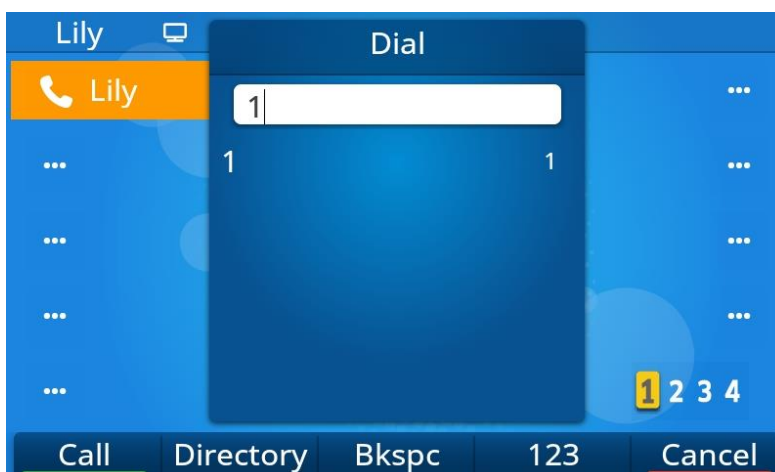Use one of the following methods:	
	Enter the number directly on the dialpad.
	Offhook the handset.
	Press the Handsfree key.
	If a programmable key for SIP account is set on the homepage, press the SIP account key to access the dialer.

3.3.2 Dialing the phone number



	Open the dialer.
Use one of the following methods:	
	Enter the number.
	Select the corresponding contact from the dial out list.
Use one of the following methods:	
	Press the Dial key. Make the call with the active device: handset if offhooked, headset if connected, otherwise in handsfree mode.
OK	Press the OK key to make a call.
Call	Press the Call key to make a call.
# or *	If defined in the phone settings, you can use these keys to initiate the call.

Depending on the system, after dialing the number, the call can be started automatically after a delay without action.




When you are in handsfree mode, you can take the call at any time on the handset by offhooking it. Or press the Headset key to switch the audio from handsfree to headset or from headset to handsfree.

To make an external call, dial the outside line access code before dialing your contact number. The call will start after a timeout of approximately 10 seconds if there is no action taken after dialing. If you are using multiple SIP accounts on your phone, you can choose an account to make the call.

3.3.3 Calling by name



You can call a contact by his/her name using the search feature in the company directory. This feature depends on the system configuration. If necessary, contact your administrator.

Use the alpha-numeric dialpad to switch between the numeric and alphabetic dialpad.

	Open the dialer.
abc	Switch to the alphabetical dialpad.
	Enter the first letter of your contact's name. The corresponding contacts will appear in a list. Entering more characters will narrow the search until the matched name is displayed.
	Use up-down navigation keys to select the contact you want to call.
Use one of the following:	
	Press the Dial key. Make the call with the active device: handset if unhooked, headset if connected, otherwise in handsfree mode.
OK	Press the OK key to make a call.
<i>Call</i>	Press the Call soft key to start the call.
# or *	If defined in the phone settings, you can use these keys to initiate the call.

3.3.4 Calling from the call log

You can call back a contact from the call log.




From the homepage or the dialer:	
History	Select the soft key to open call logs.
	Use up-down navigation keys to select the contact you want to call.
Use one of the following:	
	Press the Dial key. Make the call with the active device: handset if unhooked, headset if connected, otherwise in handsfree mode.
OK	Press the OK key to make a call.
<i>Call</i>	Press the Call soft key to start the call.

If you are using multiple SIP accounts on your phone, the call back is made with the SIP account displayed in the call log.

3.3.5 Calling using your personal directory

You can unhook the handset or the headset to make a call with the handset or the headset, otherwise you make a call in handsfree mode.

From the homepage or the dialer:	
<i>Directory</i>	Select the soft key to open your local directory from the homepage or the dialer.

	Select a directory.
	Select the contact to call.
Use one of the following:	
	Press the Dial key. Make the call with the active device: handset if unhooked, headset if connected, otherwise in handsfree mode.
OK	Press the OK key to make a call.
Call	Press the Call soft key to start the call.

If you are using multiple SIP accounts on your phone, you can choose which account to use to make the call.

3.3.6 Calling using Speed Dial key


You can pre-define the speed dial by long pressing the programmable key around the LCD, entering the "Program Keys" setting page, choosing "Speed Dial" as Key Type, and inputting the number to be called and account.



If you are using multiple SIP accounts on your phone, you must choose which account to use to make the call.

3.3.7 Making a peer to peer SIP call

The phone is compatible with the peer to peer IP call. It is able to call phones connected to the same local network. You can call your contact by entering the IP address of your contact's desk phone.





	Open the dialer. Enter the IP address of the peer end, such as 10*0*0*1, then dial out.
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------

The format of the entered IP address must be x*x*x*x where x is a decimal value between 0 and 255.

This feature is useful when you have no connection to a communication server (no registration, network problems, etc.). Not all the features are available. Should this occur and the phone's status should be displayed on the screen. This feature can be deactivated by your administrator.

3.4 Receiving a call

When receiving a call, you can:

	Unhook the handset to take the call.
	Press the Headset key to activate the headset and take the call.
	Press the Loudspeaker/Handsfree key to take the call in handsfree mode.
	Press the blinking line key to take the call.
Take or OK	Take the call with the headset if connected, or in handsfree mode.
 or Reject	Transfer the call to your voicemail.
Mute	Mute the ringer (the call is still incoming but the phone no longer rings).

Transfer

Transfer the call to another number.

3.5 Switching between audio modes

During a conversation, you can switch between different audio modes (handset, handsfree or headset, if connected) by pressing the Loudspeaker/Handsfree key or Headset icon. This feature depends on connected devices.


- When you are in conversation using the handset, you can switch between handset and handsfree by pressing the Handsfree key.



- When you are in conversation using the headset, you can switch between headset, handset and handsfree by pressing the Handsfree or Headset key or unhooking the handset.



- You can pre-program the group listening key and press the programmable key during a call to activate the feature.

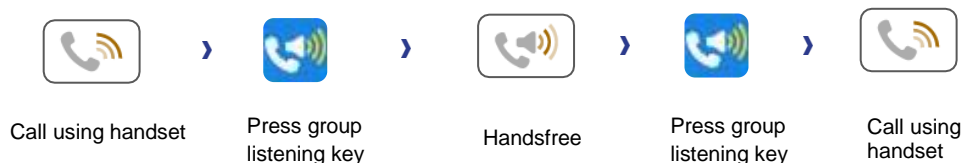

For each audio mode, during a conversation, you can adjust the volume by turning the volume knob. The volume levels range from 0 to 16.

3.6 Redialing

3.6.1 Redial list







Short press to enter the redial list. The last dialed number is highlighted.
You can also press the Call key.
Press the OK key to display details.

3.7 Directory management

3.7.1 Contacts

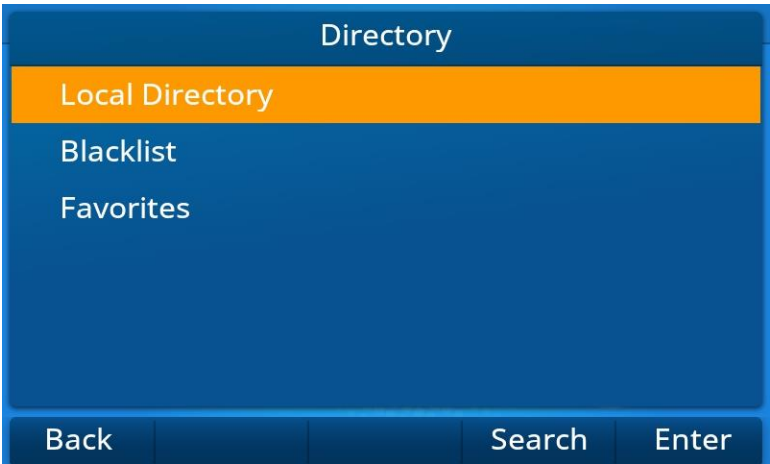A contact can be opened from your local directory.



Directory	Select the soft key to open your directory.
	Open a directory.
	Select a contact.
More → Detail	Modify a contact.
	Use up-down navigation keys to select items to be modified.

The contact card displays information about the contact.

- Avatar: Select a predefined image.
- Last name
- First name
- Office number
- Mobile
- Other
- Account: If you are using multiple SIP accounts, define an account to call the contact.
- Group: Define the group to which this contact belongs.
- Favorites

3.7.2 Contacts management

Your desk phone allows you to manage contacts in your local directory. With the M8 DeskPhone, you can import contacts from your mobile phone to a specific directory (*External Directory*).

The directory is accessible from the homepage dynamic key or from the menu:

Use one of the following:	
Directory	Select the directory on the soft key.
Menu → Directory	Use the menu to access your directory.



Categories of directory:

<i>Directory</i>	Use the menu or soft key to access your directory.
<i>Local Directory</i>	Your local directory stores all saved contacts and groups.
<i>External Directory</i>	External directory stores contacts imported via Bluetooth.


Operations on contacts in the directory:

<i>Search</i>	Search a contact.
<i>Add</i>	Create a new contact.
<i>Bkspc</i>	Delete a contact.
<i>Option</i>	Display more.
<i>Call</i>	Call the selected contact.
<i>Detail</i>	Display information about a contact.
<i>Delete all</i>	Delete all contacts or groups.
<i>AddGrp</i>	Add a new group.
<i>Enter</i>	Confirm the selected items.
<i>Back</i>	Return to the previous menu or main page.

3.7.3 Calling your contact

<i>Directory</i>	Select the soft key to open your directory.
Use one of the following methods:	
<i>Search</i>	Search for contacts in all directories and groups.
	Select the searched contacts.
	Select the number you want to call.
<i>OK or Call</i>	Start the call.

3.7.4 Creating a new contact

<i>Directory</i>	Select the soft key to open your directory.
<i>Local Directory</i>	Open the local directory.
<i>Add</i>	Press the soft key to create a new contact.
<i>Switch or</i> 	<ul style="list-style-type: none"> Avatar: Select a predefined image. Account: If you are using multiple SIP accounts, define an account to call the contact. Group: Define the group to which this contact belongs.
<i><Abc></i>	<ul style="list-style-type: none"> Last name First name
<i><123></i>	<ul style="list-style-type: none"> Office number

	<ul style="list-style-type: none"> • Mobile • Other
OK or <i>Save</i>	The new contact is added to the local directory.

Other method:



- Add a contact from the call log.

For external numbers, we recommend you use a canonical address format comprising '+', followed by the country code (e.g. '33'), and then the number without the first digit (e.g. +33 1 55 66 70 00). To get the '+' sign, long press on the '0' key. The example is for calling a number in France from another country.



3.7.5 Creating a new group

<i>Directory</i>	Select the soft key to open your directory.
<i>Local Directory</i>	Open the local directory.
<i>AddGrp</i>	Select it to add a group.
<Abc><123>	Enter the name of the group.
OK or <i>Save</i>	The new group is added to the directory.

3.7.6 Modifying a contact


<i>Directory</i>	Select the soft key to open your directory.
<i>Local Directory</i>	Open the local directory.
	Select the contact to modify.
<i>Detail</i>	Open the contact card.
	Fill in the contact information. Use up-down navigation keys to edit a field.
OK or <i>Save</i>	Save the contact in the local directory.

3.7.7 Deleting a contact


<i>Directory</i>	Select the soft key to open your directory.
	Select the soft key to access your directory.
	Use up-down navigation keys to select the contact to delete.
<i>Bkspc</i>	Press the soft key.
OK or <i>OK</i>	Confirm the deletion.

3.7.8 Deleting all contacts


<i>Directory</i>	Select the soft key to open your directory.
<i>Local Directory</i>	Open the local directory.

	Use up-down navigation keys to select the contact to be deleted.
<i>Option</i>	Press the soft key.
<i>Delete all</i>	Delete all the contacts.
OK or <i>OK</i>	Confirm the deletion.

3.7.9 Deleting a group in the local directory

<i>Directory</i>	Select the soft key to open your directory.
<i>Local Directory</i>	Open the local directory.
<i>Group</i>	Access a group.
	Select the group to delete.
<i>Bkspc</i>	Press to delete a group.
OK or <i>OK</i>	Confirm the deletion.

3.7.10 Deleting all groups in the local directory

<i>Directory</i>	Select the soft key to open your directory.
<i>Group</i>	Access a group.
	Select the group to be deleted.
<i>Delete all</i>	Press to delete a group.
OK or <i>OK</i>	Confirm the deletion.

3.7.11 Importing contacts from your mobile phone via Bluetooth®


To import a contact from your mobile phone, you have to pair it with your desk phone.

Before performing the pairing operation, the device must be in detectable mode. Consult the user documentation of your Bluetooth® device.

The phone is in idle state.	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Bluetooth</i>	Use up-down and "OK" navigation keys to select <i>Bluetooth</i> .
<i>Scan</i>	Press the softkey under the label <i>Scan</i> . Scanning starts. Searching for Bluetooth® equipment. Wait for the detected equipment type and address to be displayed.
<i>Connect</i>	Add the device by pressing on the associated key: <i>Connect</i> .

Confirm

The pairing PIN code will be displayed on the screen. Ensure that the PIN code is the same on the Bluetooth phone. Then select Confirm on both the Bluetooth phone and desk phone.

This icon is displayed on your desk phone: .

After the Bluetooth connection is successful, the phone screen will pop up whether to synchronize contact options. The contacts are automatically imported into the directory [External Directory](#).

If you enable mobile contacts sync feature, you also need to authorize the phone to sync the contacts temporarily on the mobile phone.


If necessary, you can manually synchronize contacts:

The phone is in idle state.	
Menu	Press the Menu soft key to access the Main Menu.
Basic Setting	Use up-down and “OK” navigation keys to select Directory .
Bluetooth	Use up-down and “OK” navigation keys to select Bluetooth .
Paired Bluetooth Device	Use up-down and “OK” navigation keys to select Paired Bluetooth Device . The paired device is listed. Select your connected mobile phone.
Detail	Press Detail .
Sync BT Contacts	Turn on manually.

In the external directory, click “sync” to manually synchronize contacts.

3.8 Managing the call log (history)

The call log can be queried and managed when the phone is in idle state.

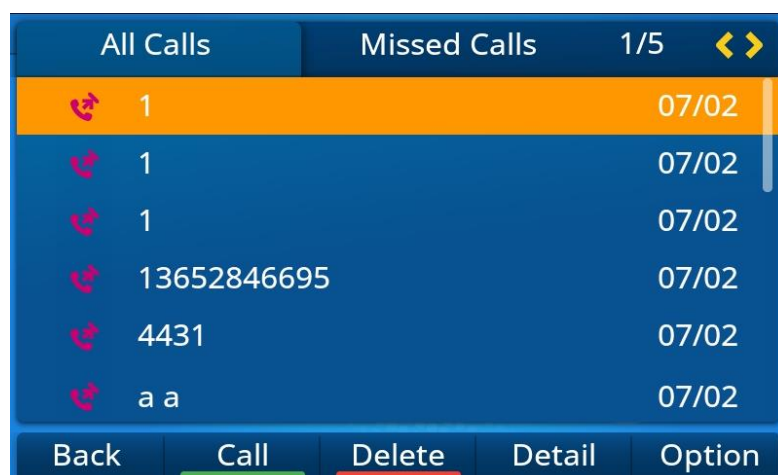






The call log is accessible from the dynamic programmable key on the phone homepage or by the menu.

Use one of the following methods:

History	If configured, use the History dynamic programmable key to access to the call log directory.
Menu → History	Use the Menu key to access the call log.

In this user manual, we use the dynamic programmable key to access the call log.



All call logs are displayed with an icon showing the type of call.

	Answered incoming calls.
	Missed calls.
	Unanswered incoming call that has been acknowledged.
	Answered outgoing calls.
	Unanswered outgoing calls.

Actions available from the call log:

<i>Bkspc</i>	Delete the selected entry. Note that no confirmation is requested.
<i>Call</i>	Call the selected entry.
<i>More</i>	Access more features.
OK or <i>Detail</i>	View details about the selected entry: name, number, time, relevant SIP account, and duration.
<i>Delete all</i>	Delete the entire log associated with the selected contact. Note that no confirmation is requested.
<i>Missed</i>	Display missed calls only.
<i>AddClist</i>	Add the selected contact in your local directory. If the contact already exists, the screen for editing the contact is displayed.
<i>Back</i>	Go back to the Homepage.


3.8.1 Calling a contact

<i>History</i>	Select the soft key to open call logs from the homepage or the dialer.
	Select the contact to call.
Use one of the following methods:	
	Press the Call key to make a call with the active device: handset if unhooked, headset if connected, otherwise in handsfree mode.
OK	Press the OK key to make a call with the active device: handset if unhooked, headset if connected, otherwise in handsfree mode.
<i>Call</i>	Press the Call key to make a call with the active device: handset if unhooked, headset if connected, otherwise in handsfree mode.

3.8.2 Displaying missed calls only

<i>History</i>	Select the soft key to open call logs from the homepage or the dialer.
<i>Missed</i>	Press this key to display missed calls only.

3.8.3 Deleting the call log of a contact

<i>History</i>	Select the soft key to open call logs from the homepage or the dialer.
	Select the contact log to delete.
<i>Bkspc</i>	Delete the selected call log. Note that no confirmation is requested.

3.8.4 Clearing the call log



<i>History</i>	Select the soft key to open call logs from the homepage or the dialer.
<i>Option</i>	Access more features.
<i>Delete all</i>	Delete all call logs.
OK or <i>OK</i>	Confirm the deletion.

If you are using multiple SIP accounts on your phone, the relevant SIP account is displayed in entry details of the call log (OK or *Detail*).



3.9 Managing speed dial

Speed dial allows you to call a number rapidly. You can create Speed Dial keys by programming keys from the homepage.

3.9.1 Creating a Speed Dial key

Use one of the following methods:	
	Long press on a free programmable key.
<i>Menu</i> → <i>Features</i> → <i>Program Keys</i>	Use up-down and "OK" navigation keys to select <i>Program Keys</i> .
To create a Speed Dial key:	
<i>Switch</i> or 	Define the type of programmable key <i>Speed Dial</i> .
<i>Account</i>	Associate a SIP account for making a call.
<i><123><Abc></i>	Enter the number and its label.
OK or <i>Save</i>	Save the Speed Dial key.

3.9.2 Making a call using speed dial

	 Select the Speed Dial key for making a call.
-------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------

3.10 Sending DTMF signals

During a conversation, you may have to send DTMF signals, for example, with a voice server, an automated attendant or a remotely consulted answering machine.



Enter DTMF code.

- To activate or deactivate DTMF mode

The phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Sound</i>	Use up-down and "OK" navigation keys to select <i>Sound</i> .
<i>DTMF Tone</i>	Use up-down and "OK" navigation keys to select <i>DTMF Tone</i> .
<i>Switch</i> or	Activate or deactivate DTMF mode.
OK or <i>Save</i>	Validate your choice.
	End the settings.

3.11 Muting the microphone

When you mute the microphone, you can hear your contact but he/she cannot hear you.

During a conversation:

	Press the mute key to disable the microphone. >> The key lights up.
	Press it again to resume the conversation. >> The key is no longer lit.

3.12 Auto answer

In the auto answer mode, calls are automatically answered.

To enable the auto answer:

The phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Features</i>	Use up-down and "OK" navigation keys to select <i>Features</i> .
<i>Auto answer</i>	Use up-down and "OK" navigation keys to select <i>Auto answer</i> .
	Select the SIP account. All incoming calls to this SIP account will be automatically answered.
<i>Switch</i> or	Enable the auto answer.
OK or <i>Save</i>	Save the settings.
	This icon is displayed in the status bar.

3.13 Making an intercom call



When you make an intercom call, the call is automatically picked-up by your contact if intercom is enabled on your contact's phone. The ring tone will then be different.

To make an intercom call, you have to create a programmable key: *Intercom*.

- *Account*: Select the relevant SIP account.
- *Label*: Enter the label of the key displayed on the homepage.
- *Value*: Enter the contact number to call.





3.14 Configuring intercom calls

When you receive an intercom call, the desk phone automatically answers the call if you have enabled this feature. You can manage actions to be taken by your desk phone when you receive an intercom call.

The phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Features</i>	Use up-down and "OK" navigation keys to select <i>Features</i> .
<i>Intercom</i>	Use up-down and "OK" navigation keys to select <i>Intercom</i> .
	Select the SIP account. All incoming calls to this SIP account will be automatically answered.
<i>Switch</i> or 	<ul style="list-style-type: none"> • <i>Allow</i>: Enable/Disable intercom call. • <i>Mute</i>: Enable/Disable mute. • <i>Tone</i>: Enable/Disable tone. • <i>Barge</i>: Enable/disable barge.
OK or <i>Save</i>	Save the settings.



3.15 Changing a PIN code

The PIN code is required to unlock the phone. The default PIN code is 0000.

The phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Phone Lock</i>	Use up-down and "OK" navigation keys to select <i>Phone Lock</i> .
<i>Changing a PIN code</i>	Use up-down and "OK" navigation keys to select <i>Changing a PIN code</i> .
	Enter the current PIN code.
	Enter the new PIN code.
	Confirm the new PIN code.
OK or <i>Save</i>	Save the settings.
	End the settings.

3.16 Locking/Unlocking your desk phone


To enable the phone lock when the phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Phone Lock</i>	Use up-down and "OK" navigation keys to select <i>Phone Lock</i> .
<i>Switch</i> or 	Enable the option: <i>Lock Enable</i> .
	End the settings.

To lock/unlock your desk phone, you can also create a programmable key: *Phone Lock*.


- *Label*: Enter the label of the key displayed on the homepage.

3.16.1 Locking your desk phone

	Select the lock/unlock programmable key.
<i>OK</i> or OK	Validate your choice. Your phone is locked.




You can only call emergency numbers once the phone is locked (up to 3 numbers, configured by the administrator).

3.16.2 Unlocking your desk phone

	Unlock your desk phone. A PIN code is required to unlock the desk phone (the default PIN code is 0000).
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------

3.16.3 Activating or deactivating the automatic keypad lock

The phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Phone Lock</i>	Use up-down and "OK" navigation keys to select <i>Phone Lock</i> .
<i>Switch</i> or 	Enable the option: <i>Auto Lock Enable</i> .
	Enter the timeout (in seconds) without activity before the keylock.
OK or <i>Save</i>	Validate your choice.
	End the settings.




3.17 During a conversation



Actions available during a conversation:

<i>End</i>	End the call.
<i>Hold</i>	Place the call on hold.
<i>Transfer</i>	Transfer the call.
<i>Resume</i>	Resume a call (on hold, muted).
<i>New</i>	Make a second call when the first call is on hold.
<i>Swap</i>	Switch between calls.
<i>Conf</i>	Establish a conference call.
<i>End conf</i>	End the conference with all participants.
<i>Mute</i>	Mute/unmute the current participant.



3.18 Making a second call during a conversation

During a conversation:	
<i>Hold</i>	Your first call is placed on hold.
<i>New</i>	The dialer and call log are displayed.
Use one of the following methods:	
	Enter the number.
 → OK	Select a contact in the call log.
<i>Directory</i> → OK or <i>Call</i>	Select a contact from the local directory.
<i><Abc></i> → OK or <i>Call</i>	Call your contact using the Dial By Name feature.
	Select the Redial feature.

3.19 Answering a second call during a conversation

During a conversation, another person is trying to call you. You are alerted with 3 beeps. The information about the second call is displayed on the screen. The key of the SIP account is blinking blue.

Use one of the following methods:


	Press the blinking line key associated with the SIP account receiving the call.
<i>Take</i> or OK	Take the call with the headset if connected, or in handsfree mode.
 or <i>Reject</i>	Deflect the call to your voicemail.
<i>Mute key</i>	Mute the ringing (the call is still incoming but the phone no longer rings).
<i>Forward</i>	Transfer the call to another contact. Use one of the following: Use the up-down navigator (if necessary) to find the contact to call. Enter the number or name of the contact to whom the call will be transferred. OK Transfer the call to the selected contact.

If the second call comes in again, you can still forward it.

3.20 Canceling your second call and resuming the first call

You are in conversation with the second contact and the first contact is on hold.

Use one of the following methods:


	You or the second contact hangs up.
<i>End</i>	Press the soft key with the following label: <i>End</i> .
Resume the call on hold:	
<i>Resume</i>	Press the soft key with the following label: <i>Resume</i> . The call with your first contact is resumed.

3.21 Placing a call on hold

During a conversation, you wish to place the call on hold and resume it later on the same phone.



To place the call on hold:

Use one of the following methods:

	Press the Hold key.
<i>Hold</i>	Press the soft key with the following label: <i>Hold</i> .

To resume the call which is on hold:



Use one of the following methods:

	Press the Hold key.
<i>Resume</i>	Press the soft key with the following label: <i>Resume</i> .
	Press the account key that is defined as hold.

3.22 Switching between calls

During a conversation, a second call is on hold.

Use one of the following methods:


<i>Swap</i>	Press the soft key with the following label: <i>Swap</i> .
	Press the Hold key.
	Press the account key that is defined as hold.

3.23 Transferring a call

3.23.1 Transferring a call to another contact on hold

During a conversation, a second call is on hold.


Use one of the following methods:

	Press the Transfer key. The two contacts are connected.
<i>Transfer</i>	Press the soft key with the following label: <i>Transfer</i> . The two contacts are connected.

3.23.2 Transferring your call to another contact


During a conversation:

Use one of the following methods:

	Press the Transfer key. The current call is on hold.
<i>Transfer</i>	Press the soft key with the following label: <i>Transfer</i> . The first call is on hold.

<i>New → OK or Call</i>	Call a new contact by using the dialer and dialing by name from the call log or directory. Your contact answers the call.
-------------------------	------------------------------------------------------------------------------------------------------------------------------

Use one of the following methods:

	Press the Transfer key. The two contacts are connected.
<i>Transfer</i>	Press the soft key with the following label: <i>Transfer</i> . The two contacts are connected.


Transfer between two external calls depends on the regulations of countries concerned and the server configuration.

3.23.3 Blind transfer

You can also immediately transfer your call, without having to wait for your contact to answer.

During a conversation:

Use one of the following methods:

	Press the Transfer key. The current call is on hold.
-------------------------------------------------------------------------------------	---------------------------------------------------------

<i>Transfer</i>	Press the soft key with the following label: <i>Transfer</i> . The first call is on hold.
<i>New → OK</i> or <i>Call</i>	Call a new contact by using the dialer and dialing by name from the call log or directory.
<i>Blind transfer</i>	Before your contact answers the call, select <i>Blind transfer</i> . The two contacts are connected.

Transfer between two external calls depends on the regulations of countries concerned and the server configuration.

3.24 Three-party conference


During a conversation, a second call is on hold.

<i>Conf</i>	Press the soft key with the following label: <i>Conf</i> . You are in conference mode.
-------------	-------------------------------------------------------------------------------------------

3.24.1 End conference

You are in conference mode.


Use one of the following:

	Press the On-Hook key. The conference is ended.
<i>End</i>	Press the soft key with the following label: <i>End conf</i> . The conference is ended.

3.24.2 Leaving your two contacts talking together after the conference

You are in conference mode.


Use one of the following:

	Press the Transfer key. The two participants remain on the call.
<i>Transfer</i>	Press the soft key with the following label: <i>Transfer</i> . The two participants remain on the call.

3.25 Multi-party conference

You are in a multi-party conference call.

Use one of the following methods:


	Press the Hold key.
<i>Hold</i>	Press the soft key with the following label: <i>Hold</i> .

<i>New → OK or Call</i>	Call a new participant by using the dialer and dialing by name from the call log or directory. You are in conversation with the new participant.
<i>Join</i>	The new participant is joining the conference call.

When the maximum of participants is reached, you will not be able to make a new call to add a new participant.

3.25.1 End conference




You are in conference mode.

Use one of the following methods:	
	Press the On-Hook key. The conference is ended.
<i>End conf</i>	Press the soft key with the following label: <i>End conf</i> . The conference is ended.


If you are a participant (you did not initiate the conference call), you can exit the conference by pressing the On-Hook key.



3.26 Hiding your phone number

You can choose to hide your identity when making a call.

The phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Features</i>	Use up-down and "OK" navigation keys to select <i>Features</i> .
<i>Anonymous</i>	Use up-down and "OK" navigation keys to select <i>Anonymous</i> .
	Select the SIP account whose phone number will be hidden.
<i>Switch or</i> 	Enable the Anonymous option, and enter the relevant server-supported feature code.
<i>OK or Save</i>	Validate your choice.
	End the settings.



3.27 Rejecting anonymous calls

The phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Features</i>	Use up-down and "OK" navigation keys to select <i>Features</i> .
<i>Anonymous rejection</i>	Use up-down and "OK" navigation keys to select <i>Anonymous rejection</i> .
	Select the corresponding SIP account.

 Switch or	Enable the option <i>Anonymous rejection</i> , and enter the relevant server-supported feature code.
OK or Save	Validate your choice.
	End the settings.

3.28 Do not disturb (DND)

You can make your phone temporarily unavailable for all calls.


The phone is in idle state:	
Menu	Press the Menu soft key to access the Main Menu.
Features	Use up-down and "OK" navigation keys to select <i>Features</i> .
DND	Use up-down and "OK" navigation keys to select <i>DND</i> .
 Switch or	Enable the DND option.
OK or Save	Validate your choice.
	End the settings.

To disable the DND feature, follow the same procedure. You can also program a key on the homepage to have a direct access to this feature.

3.29 Call Forward

When you are absent or already in a call, you can forward all your calls to a defined number. You can program a key to activate the Call Forward feature.

The phone is in idle state:	
Menu	Press the Menu soft key to access the Main Menu.
Features	Use up-down and "OK" navigation keys to select <i>Features</i> .
Call Forward	Use up-down and "OK" navigation keys to select <i>Call Forward</i> .
Select the type of call forwarding:	
Always Forward	All your calls are immediately forwarded to a defined number.
Busy Forward	All your calls are forwarded to a defined number when you are already on the line.
No Answer Forward	All your calls are forwarded to a defined number when you are unable to answer.



 Switch or	Enable the Call Forward feature.
Transfer	Enter the number.
OK or Save	Validate your choice.



End the settings.

3.30 Canceling call forwarding



The phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Features</i>	Use up-down and "OK" navigation keys to select <i>Features</i> .
<i>Call Forward</i>	Use up-down and "OK" navigation keys to select <i>Call Forward</i> .
Select the type of call forwarding to cancel:	
<i>Always Forward</i>	All your calls are immediately forwarded to a defined number.
<i>Busy Forward</i>	All your calls are forwarded to a defined number when you are already on the line.
<i>No Answer Forward</i>	All your calls are forwarded to a defined number when you are unable to answer.
<i>Switch</i> or 	Disable the Call Forward feature.
OK or <i>Save</i>	Validate your choice.
	End the settings.

3.31 Listening to your voice messages

This feature depends on the PBX configuration. If necessary, contact your system administrator.

The message key flashes when you have received a new voice message or if you have missed calls.

	Press the message key. The number of voice messages received or calls missed is displayed on the screen.
X new voice message(s)	Use up-down and "OK" navigation keys to access voicemail.
	The number of new voice messages is displayed for each registered account. Select the relevant account.
OK or <i>Enter</i>	Call your voicemail. Follow the voice guidance to listen to your voice messages from the voicemail server.

You can use the menu to access voicemail: *Menu* → *Voicemail* → *View Voice Messages*.



3.32 Defining a hotline number

If configured, the hotline number is dialed immediately or after a defined time delay when you pick up the handset or press the handsfree button.

Refer to the following procedure to configure a hotline number:

The phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
-------------	--------------------------------------------------

<i>Features</i>	Use up-down and "OK" navigation keys to select <i>Features</i> .
<i>Hotline</i>	Use up-down and "OK" navigation keys to select <i>Hotline</i> .
<i>Number</i>	Enter a hotline number.
<i>Delay</i>	Enter the time delay in seconds before the hotline number is dialed. The hotline number is immediately dialed if the delay is not configured.
<i>Switch</i> or 	Enable the Hotline feature.
OK or <i>Save</i>	Validate your choice.
	End the settings.

Follow the same procedure to deactivate the Hotline feature. This feature can also be configured on the Web Based Management page.

3.33 Multicast paging

Multicast Paging allows you to broadcast instant audio announcements to users who are listening to a specific multicast group on a specific channel. The phone supports 25 channels.

Note: All IP phones in the multicast paging group must be deployed in the same subnet since a broadcast is used. The phone can only send/receive broadcasts to/from the listened channels. Other channels' broadcasts will be ignored automatically by the IP phone.

3.33.1 Set a paging key

You can set a Multicast Paging key for a paging group, which allows you to send announcements quickly on the idle screen.

The phone is in idle state.	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Features</i>	Use up-down and "OK" navigation keys to select <i>Features</i> .
<i>Programmable Keys</i>	Use up-down and "OK" navigation keys to select <i>Programmable Keys</i> .
<i>Paging</i>	Select the desired key. Select Paging from the <i>Key Type</i> field. (Optional) Enter the paging group name in the <i>Label</i> field. Enter the multicast IP address and port number (e.g., 224.0.0.1:1000) in the <i>Value</i> field. Enter the desired channel between 1 and 25 in the <i>Extension</i> field.
OK or <i>Save</i>	Save the settings.

You can also long press the desired programmable key on the idle screen to set it. You can send a paging by using the Paging Key when the phone is idle.

3.33.2 Set a paging group

The phone is in idle state.	
-----------------------------	--

<i>Menu</i>	Press the Menu soft key to access the Main Menu
<i>Features</i>	Use up-down and "OK" navigation keys to select <i>Features</i> .
<i>Paging List</i>	Use up-down and "OK" navigation keys to select <i>Paging List</i> .
<i>Option → Edit</i>	<p>Add or modify paging group.</p> <p>Enter the multicast IP address and port number (e.g., 224.0.0.1:1000) in the <i>Address</i> field.</p> <p>Enter the string that will display on the phone screen in the <i>Label</i> field.</p> <p>Enter the desired channel between 1 and 25 in the <i>Channel</i> field.</p>
<i>Option → Delete</i>	Delete selected paging group.
<i>Option → Delete all</i>	Delete all paging groups.
OK or <i>Paging</i>	Send paging.

You can set a Paging List key to easily access the paging groups on the idle screen.

3.33.3 Receive multicast paging

If your system administrator has set a listening paging group for you, you can automatically receive a paging call when the phone is idle.

When there is a voice call or a paging call in progress, or when DND is activated on your phone, the phone handles the new paging call differently according to the multicast listening settings configured by your system administrator.

3.33.4 Manage a paging call

During a paging call, you can manage it manually at any time.

- Select *Hold* to place the current paging call on hold.
- Select *Retrieve* to resume the held paging call.
- Select *End* to end the paging call.


4 Doing more with your desk phone

Your desk phone is designed to evolve with the environment. It can do more than just establishing communication between people or helping you keep in touch with your contacts and enterprises.

This section describes some use cases for your desk phone.

4.1 Use your desk phone as a USB audiohub for your computer

Your phone can be used as an external audio playback/recording device for your personal computer (PC). Use the handsfree mode of your desk phone with applications such as Rainbow, OpenTouch Conversation for PC, Skype, etc. Or you can simply listen to music with outstanding audio performance.

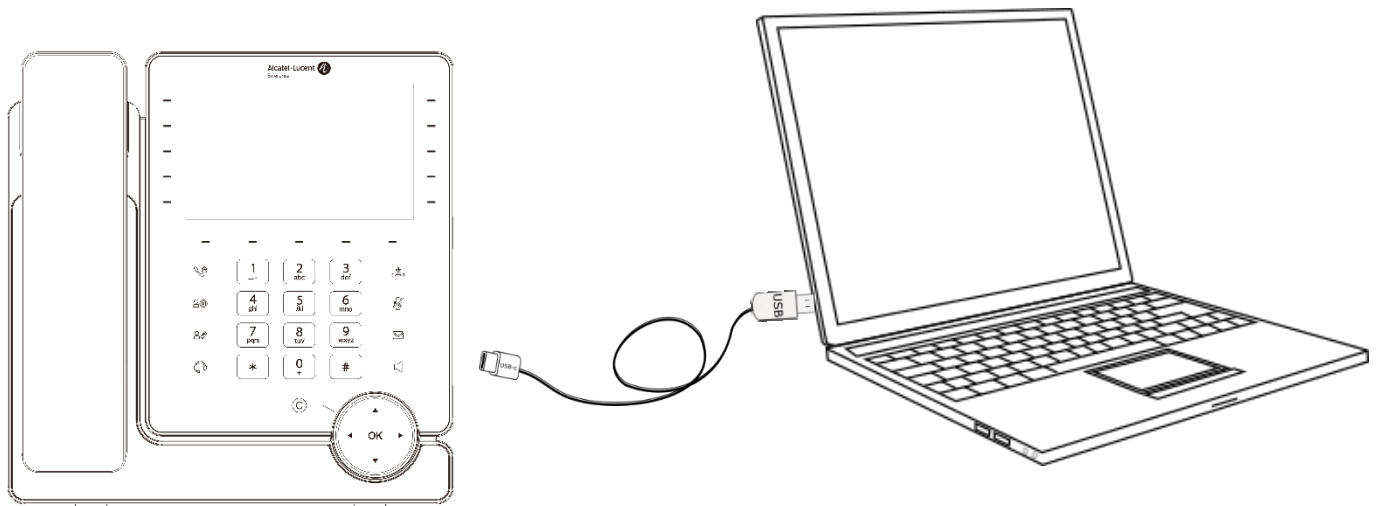

4.1.1 Installation

4.1.1.1 Prerequisites

Before using your desk phone as a USB audiohub for your computer, make sure your computer meets the minimum hardware and software requirements:

The lists below are for information only and are not contractual. Contact your administrator if necessary.

- The supported operating systems are:




Windows	Mac OS X	Linux
7 (32-bit or 64-bit) 8 (32-bit or 64-bit) 8.1 (32-bit or 64-bit) 10 (32-bit or 64-bit)	10.9 (Maverick) 10.10 (Yosemite) 10.11 (El Capitan) 10.12 (Sierra) 10.13 (High Sierra) 10.14 (Mojave) 10.15 (Catalina)	Compatible with most Linux distributions



- USB connector: we recommend a USB 3.0 port (USB 2.0 or 1.0 port may reduce performance).
- We recommend using the latest version of audio applications or web browser.

4.1.1.2 Connect your computer to your desk phone

You can use a USB-C connector of the desk phone to connect the PC. A stand-alone USB cable is not provided with your set.

- Configure your desk phone to use it as an audio hub.

The phone is in idle state.	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and “OK” navigation keys to select <i>Basic Setting</i> .
<i>USB</i>	Use up-down and “OK” navigation keys to select <i>USB</i> .
	Select the USB port you are using to connect the PC (USB-C).
<i>Switch</i> or 	Select the mode <i>Audio Hub</i> .
OK or <i>Save</i>	Validate your choice.
	End the settings.

- Create the programmable key: *Audio Hub* (See Section 5.8: Programmable keys).
The programmable key allows you to control (pause, play) the audio on the phone.
As long as the PC is not connected, the following icon is displayed in front of the programmable key and on the status bar: .
- Connect your computer to the USB-C connector of your desk phone with the USB cable (not provided).
The phone is recognized as a sound device on computer (for example, “Echo cancelling speakerphone” with Windows). The following icon is displayed in front of the programmable key and on the status bar: .


4.1.1.3 Set the default audio device for Windows

In most cases, your desk phone is ready to be used when connected to your computer. However, it is sometimes necessary to manually configure the default playback device and recording device. The configuration depends on the operating system of the connected computer. Consult the user manual of the operating system of your computer.


4.1.1.3.1 Windows

- Open the sound control panel via the Windows configuration panel or the sound icon in the Windows notification area.


- In the “Playback” tab: Select your desk phone as the default device.

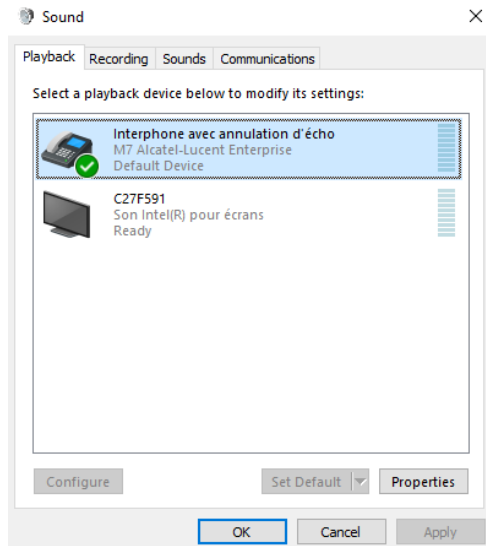

- In the “Recording” tab: Select your desk phone as the default device, if you are using the handsfree mode of your desk phone with communication applications such as Rainbow, OpenTouch Conversation for PC, etc.

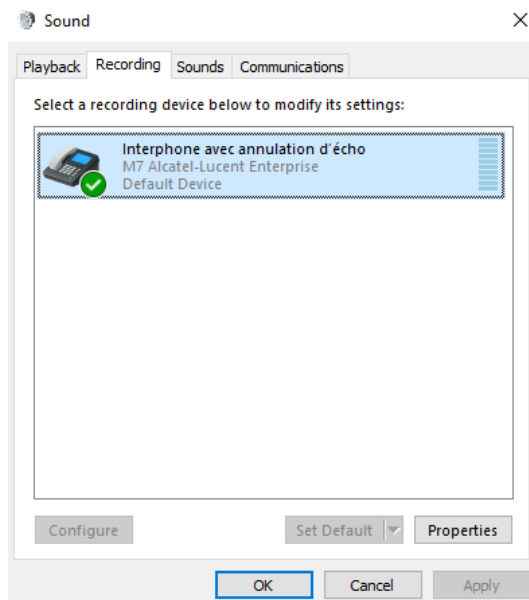

- Activating/Deactivating the sounds
If you set your desk phone as the default audio device, all of the sounds from your computer are played on your desk phone, like notifications.

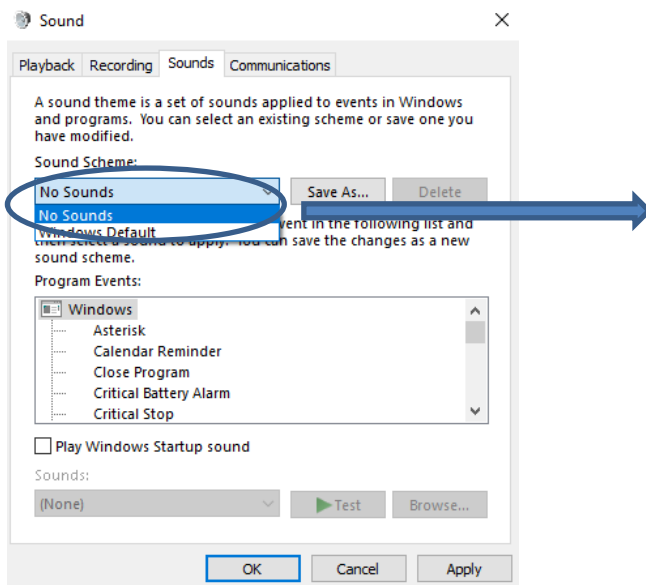


1. Activating/Deactivating the sounds.
2. Apply.

Consult the user manual of the operating system of your computer.

4.1.1.3.2 Mac OS 10.9 and above

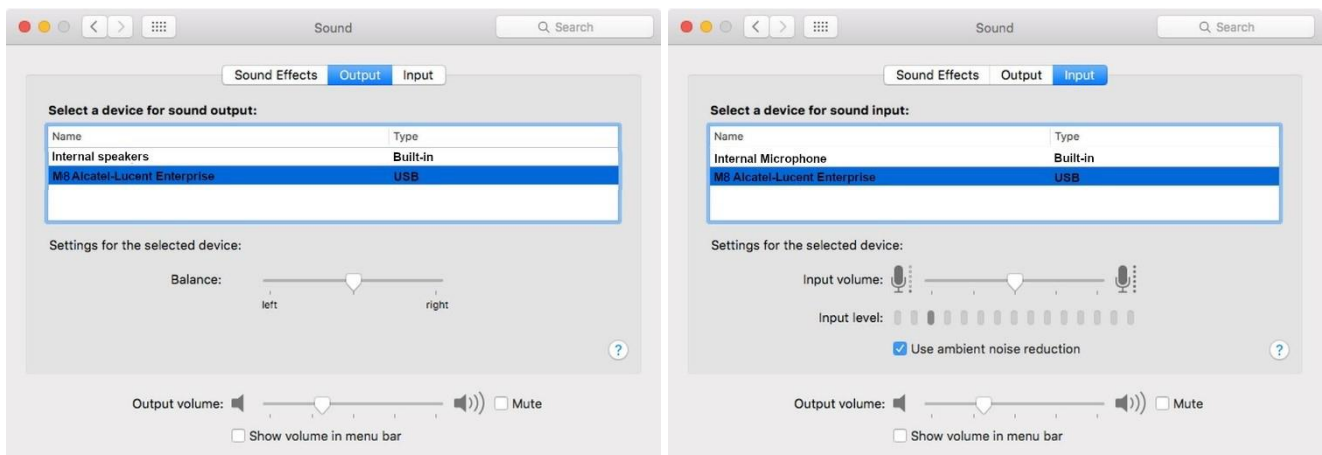

- Open System Preferences → Sound.
- Select your desk phone in Output and Input tabs:



4.1.2 Using your phone as an audio hub

When audio starts playing on the PC, it will also be played on the phone.

The audio hub programmable key lets you control the playback:

	The audio is playing on the phone. Pause the audio by pressing the programmable key.
	Play/resume the audio by pressing the programmable key.

The volume can be adjusted on the phone by using the volume knob or via the PC.

You can use the handsfree mode of your desk phone with communication applications such as Rainbow, etc.

The audio is paused when you receive an incoming call or perform any other operation on the phone that is not related to the audio hub. You can resume the audio at any time by pressing the audio hub programmable key.

4.2 Use the desk phone to process mobile calls

The desk phone can connect to the mobile via Bluetooth. When connected, the desk phone will automatically generate a programmable key for the mobile account. You can process calls and view contacts on the desk phone. The specific applications are follows:

- When there is an incoming call on your mobile phone, the desk phone will ring at the same time. You can view the call information on your desk phone and handle (answer or reject) the incoming call.
- You can control the mobile phone and dial by pressing the mobile account key when the desk phone is idle.
- After enabling the mobile contact synchronization, you can view the mobile's contacts on the desk phone (*Menu → Directory → External Directory*).

These applications can realize the linkage between the desk phone and the mobile phone, so that you can use the desk phone to handle mobile calls when you are in the office. The desk phone allows you to enjoy better sound quality while also improving office efficiency.

4.3 Configuring your desk phone for remote working

Your IP phone can be used for remote working (VPN) via a secure connection (encrypted).

A Virtual Private Network (VPN) is a technology that allows a device to create a tunneling connection to a server and become part of the enterprise's network (VPN server's network). VPN tunnels are secured via the phone OpenVPN client with TLS authentication, credentials, and certificates.


To establish a VPN connection, make sure you have the following connection information from the host provider:

- Connection settings: server address, port, and protocol.
- CA root certification file (.crt).
- Client certification file (.crt).
- Client key file (.key).

The VPN connection must be configured, enabled, and disabled on the Web Based Management page.

- Open the Web Based Management page.

When the desk phone is connected to the network, your administrator can access the Web Based Management page via a web browser by entering the IP address of your desk phone. The administrator password of the phone is requested.

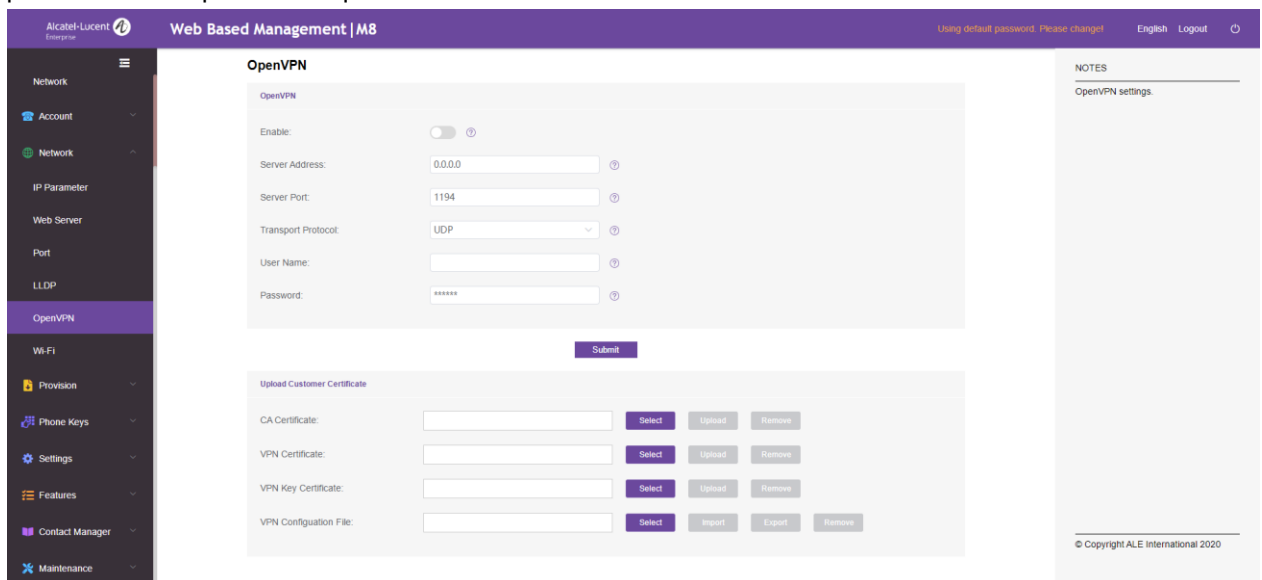

- In the left-side navigation pane, select OpenVPN.
- On the OpenVPN page, enter the required information (VPN server address, port, and protocol).
- Upload security files: click the Select button to select security files (CA root certification file, client certification file, and client key file) and then click the Upload button to upload them.


- Enable VPN.
- Click Submit.
- The desk phone restarts.

The connection will be established every time the system reboots until you manually disable the VPN.

To disable VPN:





- Open the Web Based Management page.
- In the left-side navigation pane, select OpenVPN.
- Disable VPN.
- Click Submit.
- The desk phone restarts.




4.4 Connecting your desk phone to the Wi-Fi

You can connect your desk phone to the wireless network of your company or at your home. We recommend using a 5 GHz Wi-Fi network to ensure the best audio quality. The network with the best radio signal will be automatically selected by the desk phone. A specific icon is displayed in the status bar when your desk phone is connected to a Wi-Fi access point: .

4.4.1 Configuring the wireless network

You can manually configure your desk phone to connect it to a selected Wi-Fi access point (SSID). This section is useful when you connect your desk phone to your personal Wi-Fi network for remote working or to check the Wi-Fi configuration of the phone. Before configuring your phone, you need to know the name and the network security key (passphrase) of the Wi-Fi access point.

Start your desk phone (powered by PoE or adapter).	
The phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and “OK” navigation keys to select <i>Basic Setting</i> .
<i>Wi-Fi</i>	<p>Set the wireless switch to enabled.</p> <p>All scanned SSIDs are listed in sequence according to the signal strength (it may take a few seconds to display the available networks).</p> <p>Use the up-down navigation keys to scroll the page.</p> <p>: This icon, displayed to the left of the SSID name, represents the signal strength. The more waves, the better the signal. During connection establishment, this icon is displayed to the right of the SSID name.</p> <p>: This icon indicates the current connected SSIDs.</p> <p>: This icon indicates SSIDs already saved in the desk phone.</p>
OK or <i>Detail</i>	Display all information about the corresponding wireless network, such as the SSID, encryption mode, channel, and signal strength.
<i>Connect</i>	Connect the desk phone to the selected wireless network.
	If the wireless network is not saved, enter the network security key (passphrase) if requested. Use the dialpad key to switch between the numeric and alphabetic dialpads.

	 : During connection establishment, this icon is displayed (1 to 4 bars).
	If the connection is successful, a pop-up window is displayed on your phone. A specific icon is displayed in the status bar when your desk phone is connected to a Wi-Fi access point:  . The SSID and password are automatically saved, if they have not been saved before.

4.4.2 Managing wireless networks

The Wi-Fi Manager allows you to manage all saved wireless network configurations on your desk phone. If a wireless network is available and saved on your desk phone, the desk phone automatically connects to the network. If there are several networks available, the network with the best signal will be selected.

4.4.2.1 Opening the Wi-Fi Manager


The phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Wi-Fi</i>	Use up-down and "OK" navigation keys to select <i>Wi-Fi Manager</i> .

- (1) In the Wi-Fi menu, use up-down navigation keys to move the cursor and view the wireless network list.




- (2) When the cursor moves to a wireless network, press the Detail key to view the detailed information about the network, including the SSID, encryption mode, and signaling channel.

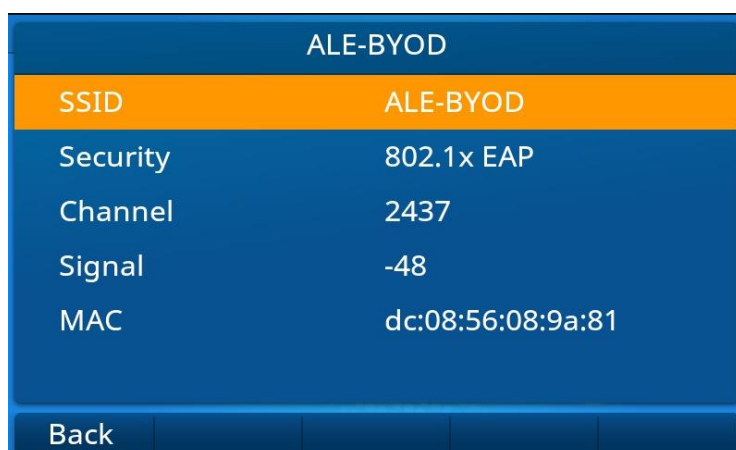


4.4.2.2 Adding a wireless network

Open the Wi-Fi Manager:	
<i>Add</i>	Enter the SSID, security mode, encryption mode, and password of a new wireless network. Use the dialpad key to switch between the numeric and alphabetic dialpads.
<i>Security</i>	Select a wireless encryption mode and enter the defined password.
<i>Save</i>	Save the wireless network.

4.4.2.3 Modifying a saved wireless network

Open the Wi-Fi Manager:	
	Use up-down navigation keys to select a saved wireless network to edit.
<i>OK or Edit</i>	Modify the SSID, security mode, encryption mode, and password of the wireless network. Use the dialpad key to switch between the numeric and alphabetic dialpads.
<i>Save</i>	Save the wireless network.

4.4.2.4 Removing a saved wireless network

Open the Wi-Fi Manager:	
	Use up-down navigation keys to select a saved wireless network to delete.
<i>Bkspc</i>	Delete the selected wireless network.

4.5 Hot Desking

This feature allows you to use any compatible SIP desk phones in your company with your own phone number. When you activate your account on a desk phone, your entire phone configuration will be retrieved: local directory, and history (requiring server support). After reboot, the phone restores its initial configuration.



We recommend activating only one phone number at a time to ensure that all incoming calls are received on the same phone.

This feature must be activated by the administrator of the desk phone.

Before using this feature, you must program a key on the desk phone for the feature *Hot Desking*.

4.5.1 Log on to Hot Desking

When you start the Hot Desking feature, all user configurations on the desk phone are cleared.

	Select the Hot Desking programmed key.
<i>OK</i>	Confirm that all current user configurations will be cleared.
	Enter the phone number and password of your SIP account.
<i>OK or Save</i>	Confirm.

The desk phone automatically loads the SIP account configuration.
You can use the desk phone with your own account.

4.5.2 Log off from Hot Desking



When you want to leave the office and restore the initial state of the desk phone, you have to logout and reboot the phone.

5 Customizing your desk phone


5.1 Adjusting the audio features

The features described in this section can also be configured on the Web Based Management page.



5.1.1 Selecting the ringing

When the desk phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Sound</i>	Use up-down and "OK" navigation keys to select <i>Sound</i> .
<i>Ringing</i>	Use up-down and "OK" navigation keys to select <i>Ringing</i> .
<i>Int Melody/Ext Melody</i>	Select the melodies for external and internal calls: <i>Int Melody/Ext Melody</i> .
	Select your melody (16 embedded melodies in total).
OK or <i>Enter</i>	Validate your choice.
	End the procedure.

5.1.2 Adjusting the ringing volume

When the desk phone is in idle state:	
	Rotate to adjust the ring tone you want (0~16 levels in total).

5.1.3 Configuring the ring mode



When the desk phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Sound</i>	Use up-down and "OK" navigation keys to select <i>Sound</i> .
<i>Ringing</i>	Use up-down and "OK" navigation keys to select <i>Ringing</i> .
<i>Ring mode</i>	Use up-down and "OK" navigation keys to select <i>Ring mode</i> .
<i>Switch</i> or 	<ul style="list-style-type: none"> <i>Normal ringing</i>: A normal ring signals an incoming call. <i>Progressive ringing</i>: A progressive ring signals an incoming call.
<i>Switch</i> or 	<p>Enable or disable the silent mode.</p> <p>The desk phone no longer rings, but the LED flashes continuously to signal an incoming call.</p>
OK or <i>Save</i>	Validate your choice.



End the procedure.

5.1.4 Configuring the beep mode

When the desk phone is in idle state:



<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Sound</i>	Use up-down and "OK" navigation keys to select <i>Sound</i> .
<i>Ringling</i>	Use up-down and "OK" navigation keys to select <i>Ringling</i> .
<i>Beep</i>	Use up-down and "OK" navigation keys to select <i>Beep</i> .
 <i>Switch or</i>	<ul style="list-style-type: none"> <i>0 Beep</i>: A normal ring signals an incoming call. <i>1 Beep</i>: A beep followed by the ring signals an incoming call. <i>3 Beeps</i>: Three beeps followed by the ring signals an incoming call.
OK or <i>Save</i>	Validate your choice.
	End the procedure.

5.1.5 Configuring the seat mode

Your desk phone supports the seat mode, which is a different ring mode. The seat mode allows your administrator to switch the ringing onto the loudspeaker, the headset, or both. This feature can be configured on the Web Based Management page.

5.2 Selecting a language




When the desk phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Languages</i>	Use up-down and "OK" navigation keys to select <i>Languages</i> .
 <i>Switch or</i>	Select the language of your choice.
OK or <i>Save</i>	Validate your choice.
	End the procedure.

5.3 Adjusting the brightness of the desk phone


When the desk phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Display</i>	Use up-down and "OK" navigation keys to select <i>Display</i> .
<i>Backlight</i>	Use up-down and "OK" navigation keys to select <i>Backlight</i> .
Use left-right navigation keys to adjust the brightness.	

<i>Active Level</i>	Adjust the brightness when the desk phone is active.
<i>Inactive Level</i>	Adjust the brightness when the desk phone is inactive.
<i>Backlight Time</i>	Set the duration for the desk phone backlight.
<i>Switch</i> or 	Set the duration for the backlight.
<i>LED Synchronize</i>	It is enabled by default. After being enabled, the backlight and key's LED will be adjusted synchronously. If disabled, the backlight and key's LED can be adjusted respectively.
<i>LED Active Level</i>	Adjust the key's brightness when the desk phone is active.
<i>LED Inactive Level</i>	Adjust the key's brightness when the desk phone is inactive.
<i>LED Working Time</i>	Set the duration for the key's LED.
 or <i>Save</i>	Validate your choice.
	End the procedure.


5.4 Enabling the Screen Saver and defining the Wait Time

When the desk phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Display</i>	Use up-down and "OK" navigation keys to select <i>Display</i> .
<i>Screen Saver</i>	Use up-down and "OK" navigation keys to select <i>Screen Saver</i> .
<i>Screen Saver</i>	Enable the Screen Saver.
<i>Wait Time</i>	Enter the wait time in seconds before the screen saver starts.
OK or <i>Save</i>	Validate your choice.
	End the procedure.


5.5 Configuring the background picture for your desk phone

When the M8 DeskPhone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Display</i>	Use up-down and "OK" navigation keys to select <i>Display</i> .
<i>Wall Paper</i>	Use up-down and "OK" navigation keys to select a picture as the homepage background.
Background Picture	The background picture can also be configured on the Web Management page.
OK or <i>Save</i>	Validate your choice.
	End the procedure.



5.6 Configuring the homepage format

When the desk phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Display</i>	Use up-down and "OK" navigation keys to select <i>Display</i> .
<i>Homepage</i>	Use left-right navigation keys or the Switch key to select a display mode for the homepage.
OK or <i>Save</i>	Validate your choice.
	End the procedure.

5.7 Defining the voicemail number



When the desk phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Voicemail</i>	Use up-down and "OK" navigation keys to select <i>Voicemail</i> .
<i>Set Voicemail Number</i>	Use up-down and "OK" navigation keys to select <i>Set Voicemail Number</i> .
	Enter the voicemail number of the corresponding account.
OK or <i>Save</i>	Validate your choice.
	End the procedure.



5.8 Programmable keys

For the M8 DeskPhone, you can configure 36 programmable keys. By connecting it with expansion modules (provided separately), you can program more keys to extend the phone functionality.

5.8.1 Creating a programmable key

	Long press on a programmable key (on the right of the screen).
 or <i>Switch</i>	Define the type of the programmable key. Depending on the type of the key, fill in the options.
OK or <i>Save</i>	Save the programmable key.

5.8.2 Deleting a programmable key

	Long press on a programmable key (on the right of the screen).
 or <i>Switch</i>	Use the left-right navigation keys to switch to the Undefined option.
OK or <i>Save</i>	Save to delete the programmable key.

5.8.3 Types of supported programmable keys

- **Undefined:** delete a programmable key.
- **Account:** line key.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the line key, displayed on the homepage.
- **Speed Dial:** speed dial key (direct call key).
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the Speed Dial key, displayed on the homepage.
 - **Value:** enter the number you want to dial immediately.
- **BLF (Busy Lamp Field):** indicates whether a specific account connected to the same system is busy or not. Use the BLF key to make a direct call or pick up a call.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the BLF key, displayed on the homepage.
 - **Value:** the number of the extension which the user wants to monitor.
 - **Extension:** a list of extensions which the user wants to monitor.
- **BLF List:** a list of extensions which the user wants to monitor. The list is defined by your administrator on the Web Management page or a configuration file.
 - **Account:** select a specific SIP account to monitor extensions of that account.
- **Hold:** place the current call on hold.
 - **Label:** enter the label of the Hold key, displayed on the homepage.
- **Transfer:** transfer the current call.
 - **Label:** enter the label of the Transfer key, displayed on the homepage.
 - **Value:** the number to be transferred.
- **Conference:** conference call feature.
 - **Label:** enter the label of the Conf key, displayed on the homepage.
 - **Value:** the number of the caller who wants to initiate a conference call.
- **DND:** do not disturb feature.
 - **Label:** enter the label of the DND key, displayed on the homepage.
- **Redial:** redial the last outgoing number.
 - **Label:** enter the label of the Redial key, displayed on the homepage.
- **Directory:** local directory.
 - **Label:** enter the label of the Directory key, displayed on the homepage.
- **Forward:** immediate forward to a number.
 - **Label:** enter the label of the Forward key, displayed on the homepage.
 - **Value:** enter the destination number.
- **Voicemail:** connect to the voicemail to obtain voice messages.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the Voicemail key, displayed on the homepage.
 - **Value:** enter the voicemail prefix code.
- **Hot Desking:** desk sharing feature.
 - **Label:** enter the label of the Hot Desking key, displayed on the homepage.
- **Prefix:** enter the predefined prefix when you start dialing.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the Prefix key, displayed on the homepage.
 - **Value:** prefix.
- **DTMF:** send a predefined DTMF digits during conversation.
 - **Label:** enter the label of the DTMF key, displayed on the homepage.
 - **Value:** DTMF code.
- **DirectPickup:** call pickup.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the DirectPickup key, displayed on the homepage.
 - **Value:** enter the pickup code followed by the extension number.

- **GrpPickup:** group call pickup.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the GrpPickup key, displayed on the homepage.
 - **Value:** enter the group pickup code followed by the extension number.
- **Headset:** activate/deactivate the headset mode.
 - **Label:** enter the label of the Headset key, displayed on the homepage.
- **GroupListen:** activate/deactivate the group listening mode.
 - **Label:** enter the label of the GroupListen key, displayed on the homepage.
- **Intercom:** make a call to a contact who will automatically answer the call.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the Intercom key, displayed on the homepage.
 - **Value:** enter the contact number to call.
- **Audio Hub:** use your desk phone as an audio hub for your computer.
 - **Label:** enter the label of the Audio Hub key, displayed on the homepage.
- **Mobile account:** use your desk phone as an audio hub for your computer.
 - **Label:** enter the label of the Mobile account key, displayed on the homepage.
- **Phone Lock:** lock/unlock the phone.
 - **Label:** enter the label of the Phone Lock key, displayed on the homepage.
- **Call Park:** You can park the call to the local extension or the desired extension through dialing the park code.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the Call Park key, displayed on the homepage.
 - **Value:** enter the Park code.
- **Retrieve Park:** You can retrieve a parked call from any phone within your network.
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the Retrieve Park key, displayed on the homepage.
 - **Value:** enter the Park code.
- **Private Hold:** In the SCA scenario, you can place a call on private hold that only you can retrieve the held call.
 - **Label:** enter the label of the key, displayed on the homepage.
- **USB Recording:** record call conversations to USB disks.
 - **Label:** enter the label of the key, displayed on the homepage.
- **ACD:** ACD on all IP phones allows the ACD system to distribute large volumes of incoming calls to the registered ACD users.
 - **Label:** enter the label of the key, displayed on the homepage.
- **Paging:** Paging allows you to broadcast instant audio announcements to users who are listening to a specific multicast group on a specific channel.
 - **Label:** enter the label of the paging key, displayed on the homepage.
 - **Value:** enter the IP address and port number.
 - **Extension:** extension number
- **Paging List:** record call conversations to USB disks.
 - **Label:** enter the label of the key, displayed on the homepage.
- **Hoteling:** enable/disable hoteling.
 - **Label:** enter the label of the key, displayed on the homepage.
- **Push To Talk.**
 - **Account:** select the relevant SIP account.
 - **Label:** enter the label of the Push To Talk key, displayed on the homepage.
 - **Value:** enter the extension number.
- **Call Waiting:** enable/disable call waiting.
 - **Label:** enter the label of the key, displayed on the homepage.

Programmable keys can also be configured by the administrator on the Web Management page or via a configuration file.

LED behavior may differ depending on the desk phone configuration. You can design the types of programmable keys to meet requirements of different PBX, for example, Automatic Call Distribution (ACD) and Hoteling features. Specific configuration depends on the PBX requirements.

For more information, contact your administrator.

5.9 Call pick-up

If authorized, you can answer calls of a specific account that no one answers on your own phone.

The server can be configured to prevent call pick-up for some accounts.

Before using this feature, you must program a key on the homepage for the following feature: *DirectPickup* or *GrpPickup*

- If the phone ringing is in your own pick-up group, select the programmed key *GrpPickup*
- If the phone ringing is not in your pick-up group, select the programmed key *DirectPickup*

5.10 Activating the headset mode


You can use a headset with your desk phone. If you want the headset to ring only when receiving an incoming call, you must activate the headset mode.

Before using this feature, you must press the headset key to activate the headset feature. When the feature is activated, the LED of the headset is on and shows a blue light.

To connect the headset to the desk phone when the desk phone is in idle state:





Press the *Headset* key.

This icon is displayed on your desk phone screen: 

5.11 Defining Time and Date format

When the desk phone is in idle state:


<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and "OK" navigation keys to select <i>Basic Setting</i> .
<i>Time & Date</i>	Use up-down and "OK" navigation keys to select <i>Time & Date</i> .
	Date: use the left-right navigation keys to select a date format. There are 6 date formats: YY-MM-DD, YYYY/MM/DD, YY/MM/DD, YYYY MM DD, YYYY-MM-DD, and MM DD WW.
	Time: use the left-right navigation keys to select a time format. There are two time formats: 12-hour clock and 24-hour clock.
OK or <i>Save</i>	Validate your choice.


5.12 Manage Bluetooth® device

This feature is only available with compatible Bluetooth® desk phone. Otherwise the corresponding menu is not displayed or is inactive. You can pair one Bluetooth® device, such as headphones, with your desk phone.


5.12.1 Installing a Bluetooth® device

Before performing the pairing operation, the device must be in detectable mode. Consult the user documentation of your Bluetooth® device.


The phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and “OK” navigation keys to select <i>Basic Setting</i> .
<i>Bluetooth</i>	Use up-down and “OK” navigation keys to select <i>Bluetooth</i> .
<i>Scan</i>	Press the softkey under the following label: Scan. Scanning starts. Searching for Bluetooth® equipment. Wait for the detected equipment type and address to be displayed.
<i>Connect</i>	Add the device by pressing on the associated key: Connect.
	Make sure your mobile phone is showing the same PIN code, and then select OK on both mobile phone and desk phone. Enter the PIN code of the device if necessary.

This icon is displayed on your desk phone: .

5.12.2 List connected devices

The phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and “OK” navigation keys to select <i>Basic Setting</i> .
<i>Bluetooth</i>	Use up-down and “OK” navigation keys to select <i>Bluetooth</i> .
<i>Paired Bluetooth Device</i>	Use up-down and “OK” navigation keys to select <i>Paired Bluetooth Device</i> . The paired devices are listed.
	Select a device.
OK or <i>More → Detail</i>	Display information about the selected device (name, MAC address).

5.12.3 Removing a Bluetooth® accessory (headset, handset, etc.)

The phone is in idle state:	
<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and “OK” navigation keys to select <i>Basic Setting</i> .
<i>Bluetooth</i>	Use up-down and “OK” navigation keys to select <i>Bluetooth</i> .
<i>Paired Bluetooth Device</i>	Use up-down and “OK” navigation keys to select <i>Paired Bluetooth Device</i> . The paired devices are listed.
	Select a device.
<i>Delete</i>	Remove the selected device.

5.12.4 Removing all Bluetooth® accessories

The phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and “OK” navigation keys to select <i>Directory</i> .
<i>Bluetooth</i>	Use up-down and “OK” navigation keys to select <i>Bluetooth</i> .
<i>Paired Bluetooth Device</i>	Use up-down and “OK” navigation keys to select <i>Paired Bluetooth Device</i> . The paired device is listed.
<i>More → Delete all</i>	Remove all devices. Note that no confirmation is requested.

5.12.5 Edit the name of your desk phone

The phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Basic Setting</i>	Use up-down and “OK” navigation keys to select <i>Basic Setting</i> .
<i>Bluetooth</i>	Use up-down and “OK” navigation keys to select <i>Bluetooth</i> .
<i>Edit My Device Info</i>	Use up-down and “OK” navigation keys to select <i>Edit My Device Info</i> . The name and the MAC address of your desk phone is displayed. You can change the name.
OK or <i>Save</i>	Validate your choice.

6 Contacting your administrator (technical support)


If necessary, you may need to contact your administrator.

Before contacting your administrator, make sure you have information such as your desk phone's codes and software version.

6.1 Technical code / Date code

The codes are located on the back shell. This label is an example and does not represent the one placed on your desk phone.

- ① Technical code (ordering code)
MAC information and date code

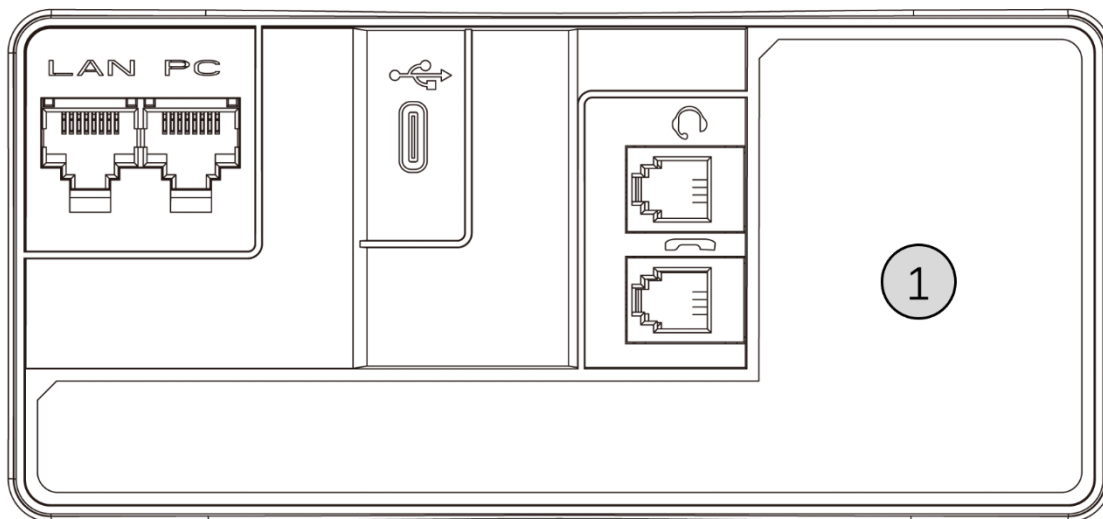

6.2 Viewing the software version/network settings (IP address)

The software version can be viewed on the phone by using the following methods:

When the desk phone is in idle state:

Use one of the following methods:

OK	Display the current IP and MAC addresses and software version of the desk phone.
Menu → Status	Display the current IP and MAC addresses and software version of the desk phone.

6.3 Accessing administrator configuration

6.3.1 Default password

The default password for the advanced settings of the desk phone is "123456".

The default user name and password for accessing the Web Based Management are "admin" and "123456".

When connecting for the first time, the desk phone will prompt the user to modify the default password.

6.3.2 Advanced Settings

The Advanced Setting menu allows the administrator to set SIP accounts, configure automatic deployment, change the password, and view IP parameters and certificates. The administrator can also restore factory settings of the desk phone by using that menu.

When the desk phone is in idle state:

<i>Menu</i>	Press the Menu soft key to access the Main Menu.
<i>Advanced Setting</i>	Use up-down and "OK" navigation keys to select <i>Advanced Setting</i> .
<i><Abc><123></i>	Enter the administrator password.

6.3.3 Web Based Management (WBM)

Web Based Management offers the administrator an easy way to configure the settings of your desk phone. Through a web based management service hosted by your desk phone, the administrator can manage and configure your phone.

When your desk phone is connected to the network, the administrator can access the Web Based Management via a web browser by entering the IP address of the phone.

Through the Web Based Management, your administrator can configure all SIP accounts of the desk phone.

The screenshot shows the 'Basic' configuration page for an account in the Alcatel-Lucent Enterprise Web Based Management (M8) interface. The left sidebar contains a menu with options: Status, Version, Accounts, Network, Account, Basic (selected), Codec, Advanced, Network, Provision, Phone Keys, Settings, Features, Contact Manager, and Maintenance. The main content area is titled 'Basic' and contains the following fields:

- Account: Account1 (dropdown)
- Account Active: ☒ (toggle)
- Account Status: Registered (dropdown)
- SIP Label Name: (text input)
- Display Name: 1009 (text input)
- User Name: 1009 (text input)
- Register Name: 1009 (text input)
- Password: ***** (password input)
- SIP Server: 172.24.190.119 (text input)
- SIP Server Port: 5062 (text input)
- Register Expire Time: 3600 (text input)
- Transport Mode: UDP (dropdown)
- Secondary SIP Server: (text input)
- Secondary SIP Port: 5060 (text input)

On the right side, there is a 'NOTES' section with the following text:

The account basic parameter configured by the administrator.

Secondary SIP Server:
It is often required in VoIP deployments to ensure continuity of phone service, for events where the server needs to be taken offline for maintenance, the server fails, or the connection between the IP phone and the server fails.

© Copyright ALE International 2020

The administrator can also define the programmable keys and dynamic programmable keys displayed on the homepage.

The screenshot shows the 'Dynamic key' configuration page in the Alcatel-Lucent Enterprise Web Based Management (M8) interface. The left sidebar is the same as the previous screenshot, with 'Dynamic key' selected. The main content area is titled 'Dynamic key' and contains a table with the following columns: Key, Type, Account, Value, Label, and Extension.

Key	Type	Account	Value	Label	Extension
Softkey 1	Menu	Account1			
Softkey 2	Do Not Disturb	Account1			
Softkey 3	History	Account1			
Softkey 4	Directory	Account1			
Softkey 5	Status	Account1			
Redial	Not Used	Account1			
Release	Not Used	Account1			
Hold	Not Used	Account1			
Mute	Not Used	Account1			
Transfer	Not Used	Account1			
Message	Not Used	Account1			
Headset	Not Used	Account1			
Handsfree	Not Used	Account1			

On the right side, there is a 'NOTES' section with the following text:

Configures the parameters of the Dynamic keys, including program key type, account, label, etc.

© Copyright ALE International 2020

All configuration parameters of the desk phone can be managed on the Web Management page.

- Audio (ringing, dial tone...)
- Backlight, Screen Saver, Auto Lock
- Date Format, Time Format
- Call Forward, DND
- Hotline
- Intercom
- Programmable keys
- Network Configuration (DM, DNS, Ethernet, IP param, LDAP...)
- VPN Configuration
- Wallpaper
- ...

7 Accessories

The ALE-supported accessories are validated to work smoothly on our clients (hardphones, softphones). The list of accessories presented in this document is not contractually binding and can be modified without prior notice.

7.1 Headset

You can use an ALE RJ9/USB headset to handle calls on M8. Unlisted USB headsets may not work properly if you connect them to your phone. To know more information about headsets, please contact your administrator or refer to the Alcatel-Lucent Enterprise website. The following headsets have gone through stringent tests and are compatible with M8:

RJ9 headset	Alcatel-Lucent Enterprise AH 11 GA Headset Monaural RJ9
	Alcatel-Lucent Enterprise AH 12 GA Headset Binaural RJ9
USB headset	Alcatel-Lucent Enterprise AH 11 U Headset Monaural USB-A
	Alcatel-Lucent Enterprise AH 12 U Headset Binaural USB-A
	Alcatel-Lucent Enterprise AH 21 U Premium Headset Monaural USB-A
	Alcatel-Lucent Enterprise AH 22 U Premium Headset Binaural USB-A
	Alcatel-Lucent Enterprise AH 22 M Premium Headset Binaural USB-A
	Alcatel-Lucent Enterprise AH 21 U II Premium Headset Monaural USB-A
	Alcatel-Lucent Enterprise AH 22 U II Premium Headset Binaural USB-A
	Alcatel-Lucent Enterprise AH 21 M II Premium Headset Monaural USB-A
	Alcatel-Lucent Enterprise AH 22 M II Premium Headset Binaural USB-A
	Alcatel-Lucent Enterprise AH 22 M II Premium Headset Binaural USB-A

7.2 Wall mounting kit

To mount your phone on the wall, you need to install a standard wall plate that you can easily find on the market. Follow the manufacturer's instructions to install the wall plate on the wall. When the wall plate is fixed, you can prepare your phone and mount it on the wall. The wall mounting kit is sold separately (refer to Section 9 about ordering information).

8 Technical specifications

Parameters	M8 DeskPhone
Width	214 mm
Length	211mm
Height	53 mm
Weight	1100g
Angle of the support foot	40° / 55°
Color	Black
Display	5-inch IPS color display, 800*480 pixels
Line key	9
Headset interface	RJ9/USB-A/USB-C
Ethernet ports	Dual GigabitEthernet ports
Power over Ethernet (IEEE 802.3af)	Class 3
External power supply (accessory)	5V/2A
Working temperature	-5°C to +45°C

9 Ordering information

Model Name	Part Number
M8 DeskPhone	3MK27009AA
EM20 Expansion Module	3MK27006AA
EM200 Smart Expansion Module	3MK27007AA
M8 Wall Mounting Kit	3MK27008AA
External Power Adapter (EU)	3MK37006EU
External Power Adapter (AU)	3MK37006AU
External Power Adapter (US)	3MK37006US
External Power Adapter (UK)	3MK37006UK

10 Guarantee and clauses

10.1 Safety instructions

- Without explicit authorization from the party responsible for compliance, users have no permission to operate the equipment and make changes or modifications to the equipment.
- Keep a safe distance between your pacemaker or implant defibrillator and the handset which includes magnetic elements: 4 centimeters (1.6 inches) at least.
- To limit the risk of interference, people with pacemakers must keep the wireless telephone away from their equipment (minimum distance of 15 cm/6 inches).
- It is recommended to follow the standard acceptance procedures before using this equipment in human safety critical areas (hospitals...).
- The handset includes magnetic elements that may attract sharp metallic objects. To prevent injury, before each use, ensure sharp metallic objects are not stuck to the earpiece and microphone.
- Avoid using phones (except for cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use this device in environments where there is a danger of explosion.
- Do not plug this phone into an Integrated Services Digital Network (ISDN) connection or into a regular Public Switched Telephone Network (PSTN) connection. This can result in severe damage to the phone.
- Never allow your desk phone to come into contact with water.
- To clean your phone, use a soft damp cloth. Never use solvents (such as trichloroethylene and acetone) which may damage the plastic parts of your desk phone. Do not use aerosol cleaners.
- M8 DeskPhone: this product is intended to be supplied, either via an Ethernet (LAN) port, or via a DC-in interface by a Certified Direct Plug-In Power Unit approved as 'FRECOM' (Limited Power Source) against CSA/UL/IEC 62368-1. The power unit must have a rated voltage of 5V DC and the current of minimum 2A. Allowed power supply is F12L20-050200SPAC.
- If you are connected to a POE connection, do not use an external power supply.
- The PoE (Power over Ethernet) devices that supply or receive power and their connected cables must all be completely indoors.

10.2 FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

10.3 IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) this device may not cause interference; and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. NMB-3(B)

This device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.




Les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

Radiation Exposure Statement


This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.


Receiving a call

	Lift the handset to take the call
	Use the headset to take the call
	Tap the handsfree key to take the call in handsfree mode
	Tap the blinking key associated with the SIP account receiving the call
<i>Take</i> or <i>OK</i>	Take the call with the headset if connected, or in handsfree mode
 or <i>Reject</i>	Reject the incoming call
<i>Forward</i>	Forward the call to another contact

During conversation



<i>End</i>	End the call
<i>Hold</i>	Call holding
<i>Transfer</i>	Call transfer
<i>Resume</i>	Retrieve a call (on hold, parked)
<i>New</i>	Make a new call during a conversation
<i>Swap</i>	Switch between two calls
<i>Conf</i>	Establish a multi-party conference call
<i>End conf</i>	Exit the conference call as a participant or end the conference call for all participants as an organizer
	Toggle the microphone on or off

Basic settings

<i>Menu</i>	Tap the soft key to access the main menu
<i>Basic Setting</i> <i>→ Language</i>	Select a language
<i>Basic Setting</i> <i>→ Display</i> <i>→ Backlight</i>	Configure Backlight parameters Set the delay before the screen saver starts
	Turn the knob to adjust the volume in the homepage/idle state or validate the status of an option on a menu
<i>Basic Setting</i> <i>→ Sound</i> <i>→ Ringing</i>	Select the melody Configure the ring mode Configure the beep mode
<i>Basic Setting</i> <i>→ Sound</i> <i>→ DTMF Tone</i>	Activate or deactivate the DTMF tone
<i>Basic Setting</i> <i>→ Sound</i> <i>→ Touch Key</i>	Activate or deactivate the touch key feedback tone
<i>Status</i>	Display IP and MAC addresses and software version
<i>Features</i>	Access the phone features: Call Forward, DND, Auto Answer, Programmable Key, Anonymous, Key As Send, Hotline, Default Account, and Intercom, etc.
<i>Message</i>	Define a voicemail number Access the voicemail

Homepage
























Soft keys	Use 5 soft keys at the bottom of the screen to access features, configure the phone, or manage calls.
Programmable keys	Use 10 programmable keys on two sides of the screen to customize different features of the phone. Tap the programmed key to use the corresponding feature (e.g., call contacts). Long tap the programmed key to enter into the key configuration page.
Turn pages	Use the "1234" key at the lower right corner of the screen to turn pages (4 pages in total). Use the left-right navigation keys or the "1234" key to navigate between pages. The number of the displayed page is highlighted.
Status bar	Display the status information including the network status and phone status at the top of the screen.
Date and time	Default mode: Date and time in the middle of the screen. Extended mode: Date and time at the top right corner of the screen.
	OK key: Tap this key to validate your choices while programming keys or configuring the phone or view the phone status in idle state. Left-right navigation key: Use the key to move from one page to another in the homepage, move the cursor in a text box or move from one tab to another in different application. Up-down navigation key: Use the key to select an option from a list. Navigation wheel: Turn the knob to decrease/increase the volume of <ul style="list-style-type: none"> the ringtone in idle state or when you receive an incoming call. the handset, loudspeaker or headset during a conversation (0~16 levels).
 key	Cancel key: Use this key to go back to the previous step.

Call management screen



Soft keys	Soft keys at the bottom of the screen display different features available depending on the call status. Tap the soft key to select the corresponding feature.
Call display screen	Call information such as the duration, number and caller name is displayed in the middle of the screen.

Function keys	
	Key to redial/take a call Tap this key once to answer an incoming call Tap this key once in idle state to access your call history Tap this key twice in idle state to redial the last outgoing call number
	Place a call on hold/retrieve the call
	Transfer key Tap this key to perform a transfer during a call
	Turn on/off the headset
	Hook on Go back to the homepage
	Mute key Tap this key to mute/unmute the microphone during a call
	Access the voicemail The message key flashes red when you have received a new voice message or missed an incoming call.
	Handsfree key Tap this key to answer an incoming call in handsfree mode Tap this key to make a call in handsfree mode Tap this key to end a call Tap this key to switch voice channel among handsfree, handset or headset mode during a call
Icons	
Icons provide information under a certain status or the status of a specific call.	
	SIP account (idle state). A grayed or crossed icon means that the SIP account is not registered (please contact your administrator).
	Incoming call icon
	Call in progress icon
	Call on hold icon
Alpha-numeric dialpad	
The phone is equipped with an alphanumeric dialpad. Enter alphabetic characters: The number pad keys have letters that can be displayed by successive taps. The last character in the series is a number.	
	In a text zone, you can switch to the alphabetic dialpad by using this key.
Some special characters can be displayed by successively tapping the key:	
	% \$ / ~ & () [] = *
	@ #
	space - _ 1
	+ . , ; : \ ? ! 0

Contacts management	
<i>Directory</i>	Tap this soft key to enter the directory menu
<i>Back</i>	Return to the previous menu
<i>Call</i>	Call the selected contact
<i>Add</i>	Add a new contact to the local directory
<i>Detail</i>	View the contact information such as name and number, etc.
<i>Option</i>	Access more options for the selected contact
<i>Option → Delete</i>	Delete the selected contact
<i>Option → Delete all</i>	Delete all contacts in the local directory
Call log	
<i>History</i>	Access the call log
<i>Back</i>	Return to the previous menu
<i>Call</i>	Call the selected contact
<i>Delete</i>	Delete the selected entry Note that no confirmation is requested.
<i>OK or Details</i>	Display the detailed information of selected item including caller name, number, and call time, etc.
<i>Option</i>	Access more features such as Add to Blacklist, Add to Contacts and Delete all
Making a call	
	Select the SIP account to make a call
	Enter the number
	Call by name
<i>History</i>	Call from call log
<i>Directory</i>	Call from your directory
Use one of the following methods after entering the number:	
	Tap the Redial key Make a call in several ways: handset if unhooked, headset if connected, otherwise in handsfree mode
<i>OK</i>	Tap the OK key to make a call Make a call in several ways: handset if unhooked, headset if connected, otherwise in handsfree mode
<i>Call</i>	Tap the Call key to make a call Make a call in several ways: handset if unhooked, headset if connected, otherwise in handsfree mode
<i># or *</i>	Tap the # or * key (depending on the phone setting <i>Menu → Features → Key As Send</i>) to make a call

ALE M8 DeskPhone

User Manual

www.aledevice.com

